US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 302-116-101 / 1996-1998 Mazda 626 — **CARB EO#: N/A**

Secret Weapon: 302-116-101 / 1996-1998 MX-6 4 Cyl — **CARB EO#: N/A**

Secret Weapon: 307-118-101 / 1996-1998 Ford Probe 4 Cyl — **CARB EO#: N/A**

Dragon Intake: 802-116-101 / 1996-1998 Mazda 626 — **CARB EO#: N/A**

Dragon Intake: 802-116-101 / 1996-1998 MX-6 4 Cyl — **CARB EO#: N/A**

Dragon Intake: 807-118-101 / 1996-1998 Ford Probe 4 Cyl — **CARB EO#: N/A**


Parts List : 1 x Intake pipe / 1 x Weapon*R Air Filter 3" / 2 x 2.5"-3" Coupler / 1 x 10mm Hose / 1 x 15mm hose
1 x 4mm hose / 1 x 3" Coupler / 1 x Intake System Bracket kit / 3 x 3" Clamp / 1 x AFM-TY Adapter Kit

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hose and the 4mm vacuum hose from the OEM intake and engine.
3. Unplug the MAF and AIT sensors. Carefully remove both sensors from the OEM air box.
4. Loosen the nuts holding the MAF to the OEM air box and remove the MAF.
5. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
6. Wipe any grease off the throttle body. Install the 2.5"-3" coupler on the throttle body and tighten with the OEM clamp.
7. Insert the Weapon*R intake pipe into the 2.5"-3" coupler. Tighten with a clamp.
8. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
9. Install the 15mm hose on the intake pipe. Insert the AIT sensor into the 15mm hose and plug it in.
10. Connect the 4mm hose from the intake pipe to the 4mm port on the engine.
11. Install the 2.5"-3" coupler on the end of the intake pipe. Tighten with a clamp.
12. Install the MAF sensor in the 2.5"-3" coupler and plug the MAF back in.
13. Line up the 4 holes on the MAF sensor with the AFM-TY adapter plate and install the plate on the MAF.
14. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
15. Install the filter assembly on the end of the AFM adapter plate. Tighten with the OEM clamp.
16. Place the U-shaped end of the bracket under the clamp on the air filter.
17. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
18. Bend the straight end of the bracket to meet the rubber mounting grommet.
19. Secure with the washer and nut from the bracket kit.
20. Position the intake pipe so it does not touch any part of the vehicle.
21. Check hood clearance. Adjust the intake tube for the best fit and clearance.
22. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

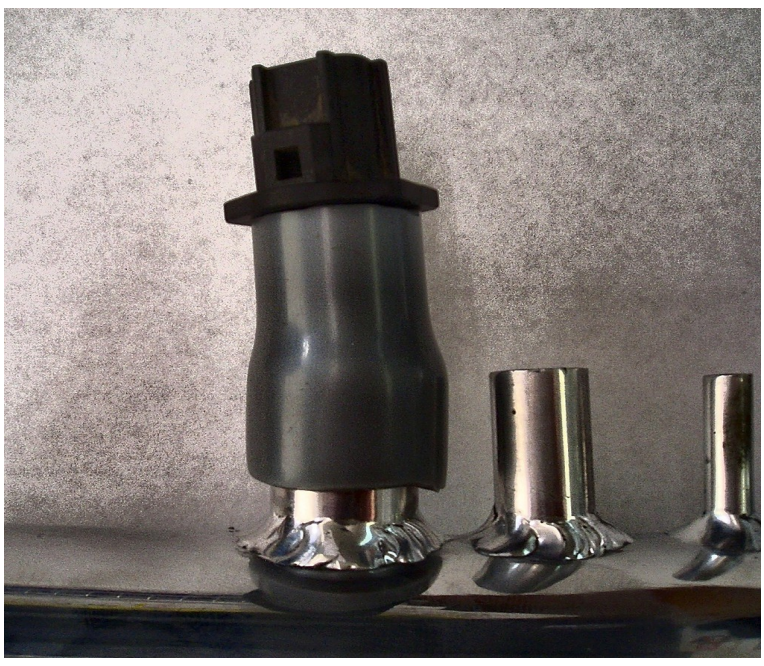







Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280