US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles.

Secret Weapon: 307-139-101 / 2001-2007 Ford Escape 3.0L V6 — CARB EO# N/A

Secret Weapon: 302-118-101 / 2001-2007 Mazda Tribute 3.0L V6 — CARB EO# N/A

Dragon Intake: 807-139-101 / 2001-2007 Ford Escape 3.0L V6 — CARB EO# N/A

Dragon Intake: 802-118-101 / 2001-2007 Mazda Tribute 3.0L V6 — CARB EO# N/A

Dual pipe section should be installed toward the throttle body.

Parts : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 2 x 3" Coupler / 1 x 2.75-3" Coupler 1 x Intake System Bracket kit / 5 x 3" Clamp / 1 x 15mm x 8" Hose / 1 x AFM-Blank Adapter Kit

1. **Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.**
2. **Remove Air Recirculator valve hose from from OEM intake and engine.**
3. **Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM airbox,**
4. **Losen the nuts holding the MAF to the OEM airbox, remove the MAF from the airbox.**
5. **Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.**
6. **Wipe the throttlebody clean of any grease, install the 2.75"-3" coupler onto throttlebody, secure with OEM clamp.**
7. **Insert Weapon*R intake pipe into the 3" end of coupler, secure with clamp.**
8. **Install the 15mm hose onto the air recirculator valve on top of throttlebody , insert other end of hose to intake pipe**
9. **Install the 3" coupler onto the end of the intake pipe, secure with a clamp.**
10. **Install MAF sensor into the 3" coupler, reconect MAF sensor harness, secure with clamp.**
11. **Line up the 4 holes on the MAF Sensor to the AFM-Blank adapter plate, install the adapter plate onto the MAF.**
12. **Install the Weapon*R Hyper filter onto the end of the AFM adapter plate.**
13. **Install the 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.**
14. **Install filter assembly onto the end of AFM adapter plate., secure with OEM clamp.**
15. **Install U-shaped part of intake system bracket under the clamp on air filter.**
16. **Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.**
17. **Bend the straight portion of the intake system bracket to the Rubber mounting grommet.**
18. **Secure with washer and nut included in bracket kit.**
19. **Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.**
20. **Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.**
21. **Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)**

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

Note: Returned Products may be subject to a 25% restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !


Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.

Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

After installation of intake. Start engine and idle until normal operating temperature. Do NOT rev engine until engine is properly warmed up. Failure to do so may cause check engine light to come on.

2007 Ford Escape XLT 3.0L V6 (Secret Weapon Intake shown)

Oil, Coolant Tanks available please visit our website @ WWW.WEAPON-R.COM, Tel#650-877-8280

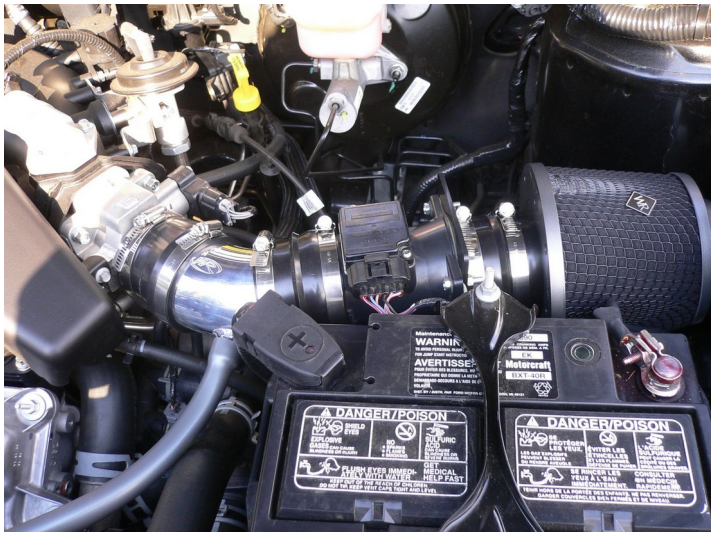



Bracket Video

Air Filter Cleaning Video

Question & Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280