US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 303-116-101 / 1993-2002 Mitsubishi Mirage 1.8L — CARB EO#: N/A

Dragon Intake: 803-116-101 / 1993-2002 Mitsubishi Mirage 1.8L — CARB EO#: N/A


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 4" / 1 x 10mm Hose / 1 x 2.5"-3" Coupler / 1 x 3" Coupler
1 x AFMEC / 1 x Intake System Bracket kit / 3 x 3" Clamp / 1 x 4" Coupler / 2 x 4" Clamp

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hard line from the OEM intake and engine.
3. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
4. Unbolt the factory MAF from the air box. Bolt the supplied MAF adapter to the MAF with the supplied hardware.
5. Wipe any grease off the throttle body. Install the 2.5"-3" coupler on the throttle body and tighten with the OEM clamp.
6. Insert the intake pipe into the 2.5"-3" coupler on the throttle body. Tighten with the supplied clamp.
7. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
8. Install the 3" coupler on the end of the intake pipe. Insert the MAF sensor into the other end of the coupler.
9. Install the 4" coupler on the Secret Weapon air filter. Tighten with the supplied clamp.
10. Install the filter assembly on the MAF adapter. Tighten with the supplied clamp.
11. Place the U-shaped end of the bracket under the clamp on the air filter.
12. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
13. Bend the straight end of the bracket to meet the rubber mounting grommet.
14. Secure with the washer and nut from the bracket kit.
15. Position the intake pipe so it does not touch any part of the vehicle.
16. Check hood clearance. Adjust the intake tube for the best fit and clearance.
17. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

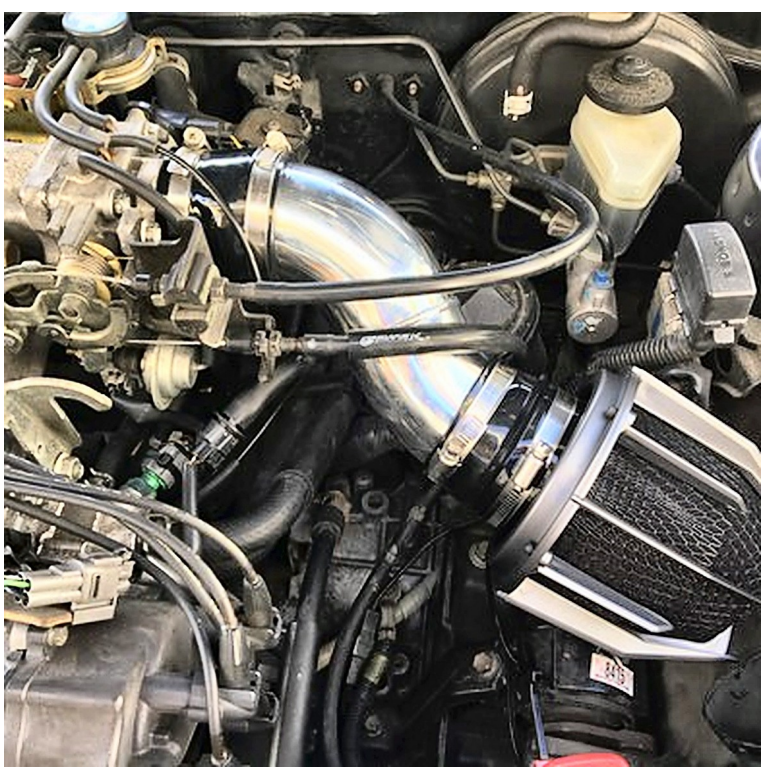





Intake System Bracket Video

Air Filter Cleaning Video