



US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles


Secret Weapon: 304-124-101 / 1990-1997 Nissan Hardbody Truck 2.4L	CARB EO#: N/A
Secret Weapon: 304-124-101 / 1998-2004 FRONTIER	CARB EO#: N/A
Secret Weapon: 304-124-101 / 1998-2004 XTERRA 4 CYL. ONLY	CARB EO#: N/A
Dragon Intake: 804-124-101 / 1990-1997 Nissan Hardbody Truck 2.4L	CARB EO#: N/A
Dragon Intake: 804-124-101 / 1998-2004 FRONTIER	CARB EO#: N/A
Dragon Intake: 804-124-101 / 1998-2004 XTERRA 4 CYL. ONLY	CARB EO#: N/A

- Parts List : 1 x Intake pipe / 1 x Air Filter / 2 x 3" coupler
2 x 3" Clamp / 1 x Aluminum box / 1 x AIT grommet
- 1 Loosen the clamps on the air cleaner assembly and remove the air cleaner hose.
 - 2 Remove the 2 butterfly nuts on top of the air cleaner assembly and lift off the air cleaner top.
 - 3 Remove the air resonator box from the fender well.
 - 4 Remove the OEM hoses from the lower air cleaner assembly, then remove the lower assembly.
 - 5 Remove the round rubber gasket from the lower air cleaner assembly.
 - 6 Install the round rubber gasket on the Weapon*R aluminum air box.
 - 7 Install the Weapon*R aluminum air box on the throttle body and tighten it down with the OEM butterfly nuts.
 - 8 Reinstall the OEM hoses on the Weapon*R air box.
 - 9 Install the 3" coupler on the 3" tube of the Weapon*R air box.
 - 10 Insert the Weapon*R intake pipe into the 3" coupler and tighten with the supplied clamps.
 - 11 Install the Weapon*R filter on the end of the intake pipe.
 - 12 Install the 3" coupler on the Secret Weapon air filter. Tighten with the supplied clamp.
 - 13 Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
 - 14 Slide the mounting bracket welded to the intake pipe onto the rubber mounting grommet.
 - 15 Secure the bracket to the rubber mounting grommet with the supplied hardware.
 - 16 Position the intake pipe so it does not touch any part of the vehicle.
 - 17 Check hood clearance. Adjust the intake tube for the best fit and clearance.
 - 18 Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

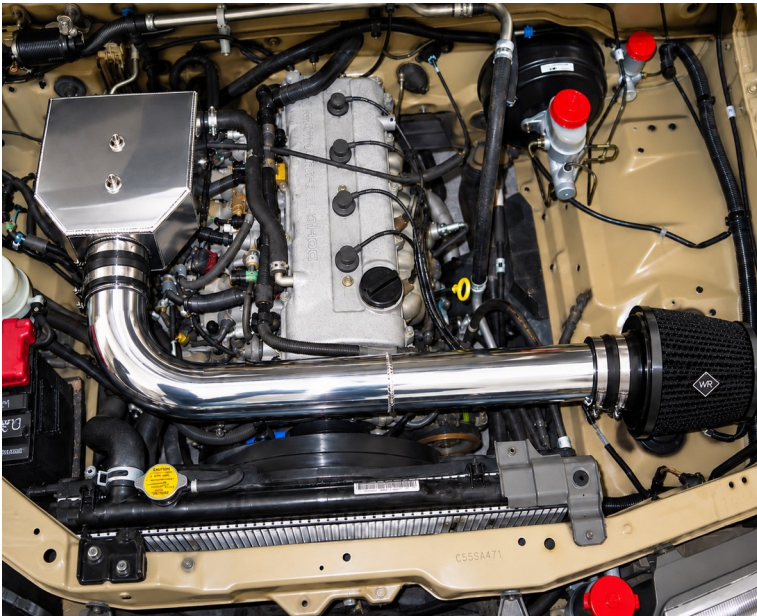

Intake System Bracket Video



Air Filter Cleaning Video