
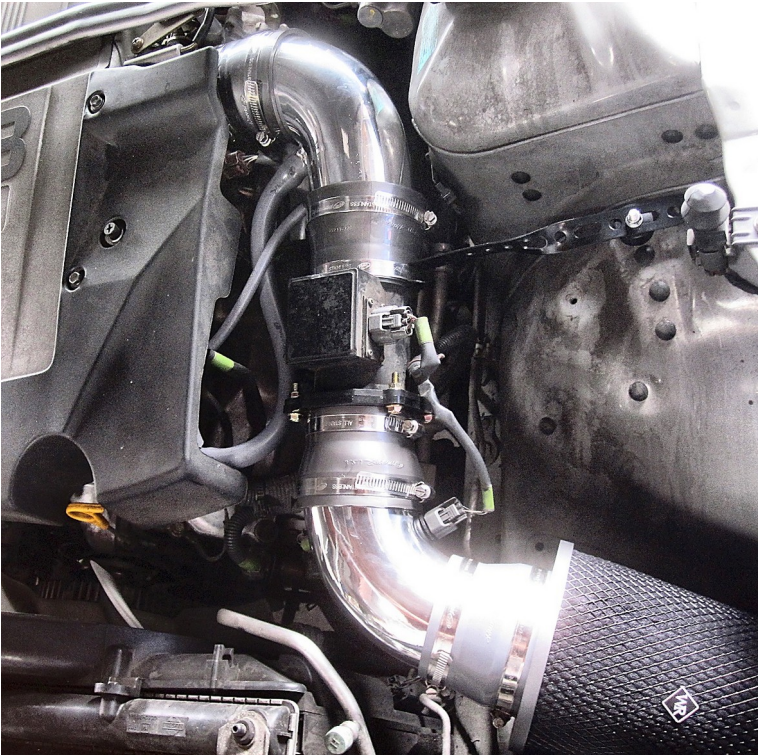


- Parts List : 2 x Weapon*R Intake Pipe / 1 x 4" Tall Air Filter / 2 x 15mm Hose / 1 x 4mm Hose / 1 x MAF Adapter / 5 x 4" Clamp
1 x 15mm Plastic "T" Fitting / 3 x 3"-3.5" Coupler / 1 x 3.5"-4" Coupler / 1 x Intake System Bracket Kit / 3 x 3" Clamp
- 1 Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
 - 2 Remove the PCV hose from the OEM intake and engine.
 - 3 Unplug the MAF sensor harness and remove the MAF sensor from the OEM air box.
 - 4 Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
 - 5 Wipe any grease off the throttle body. Install the 3"-3.5" coupler on the throttle body and tighten with the OEM clamp.
 - 6 Insert Weapon*R intake pipe #1 (the one with the vacuum ports) into the 3.5" side of the coupler. Push it on as far as it will go.
 - 7 Install another 3"-3.5" coupler on the end of the pipe with the vacuum port. Tighten with a clamp.
 - 8 Attach the MAF plate to the MAF sensor with the supplied screws.
 - 9 Install the MAF sensor into the coupler you just installed on the pipe with the vacuum port. Tighten with a clamp.
 - 10 Install a 3"-3.5" coupler on the other end of the MAF sensor. Tighten with a clamp.
 - 11 Install the black AIT rubber grommet in Weapon*R pipe #2. Insert the AIT sensor into the grommet.
 - 12 Install pipe #2 (no vacuum port) into the 3.5" coupler on the MAF sensor. Push it on as far as it will go.
 - 13 Install the 3.5"-4" coupler on the base of the Secret Weapon air filter. Tighten with the supplied clamp.
 - 14 Install the filter and coupler assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
 - 15 Plug the harness into the AIT sensor.
 - 16 Connect the vacuum hoses together with the 15mm plastic "T" fitting, as shown in the photo.
 - 17 Connect the 4mm Weapon*R hose from the pipe to the metal hard line, as shown in the photo.
 - 18 Place the U-shaped end of the bracket under the clamp on the air filter.
 - 19 Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
 - 20 Bend the straight end of the bracket to meet the rubber mounting grommet.
 - 21 Secure with the washer and nut from the bracket kit.
 - 22 Position the intake pipe so it does not touch any part of the vehicle.
 - 23 Check hood clearance. Adjust the intake tube for the best fit and clearance.
 - 24 Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

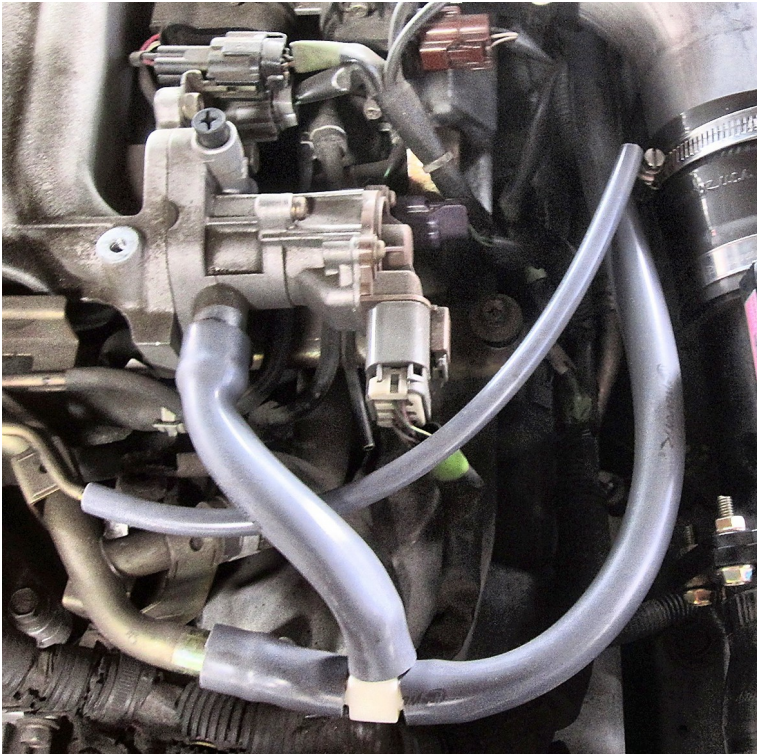

Intake System Bracket Video



Air Filter Cleaning Video