

Secret Weapon: 305-175-101 / 2007-2017 Toyota Camry V6 3.5L**CARB EO#: N/A**

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 15mm Hose / 1 x 4mm hose
2 x 3"-3" Coupler / 1 x 4mm T fitting / 2 x Intake System Bracket kit / 4 x 3" Clamp

- 1 Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
- 2 Remove the PCV hose from the OEM intake and engine.
- 3 Unplug the MAF sensor and carefully remove it from the OEM air box.
- 4 Remove all the 4mm lines from OEM air box and set aside.
- 5 Disconnect Air switching valve harness and set aside.
- 6 Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
- 7 Unbolt Air switching valve from OEM air box and set aside.
- 8 Wipe any grease off the throttle body. Install the 3" coupler on the throttle body and tighten with the OEM clamp.
- 9 Insert the Weapon*R intake pipe into the 3" coupler. Tighten with a clamp.
- 10 Measure the OEM PCV hose and replace it with the supplied 15mm hose, from the PCV port to the intake pipe.
- 11 Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
- 12 Install the 3" coupler on the intake pipe. Tighten with the supplied clamp.
- 13 Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
- 14 Remove Small OEM 4mm hose from OEM male junction and install WR 4mm Hose and run to the WR pipe port.
- 15 Install 4mm T fitting into 4mm OEM lines that were set aside from step 4. Pic Below.
- 16 Reconnect air switching valve to harness and use Bracket to bolt to vehicle (pic below)
- 17 Install U-shaped part of intake system bracket under the clamp on air filter. (pic below)
- 18 Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
- 19 Bend the straight end of the bracket to meet the rubber mounting grommet.
- 20 Secure with the washer and nut from the bracket kit.
- 21 Position the intake pipe so it does not touch any part of the vehicle.
- 22 Check hood clearance. Adjust the intake tube for the best fit and clearance.
- 23 Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.



Note: Returned products may be subject to a restocking charge. **INSTALLED PRODUCTS ARE NON-REFUNDABLE!**

Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.

Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.

Do not rev the engine until it is fully warmed up, or the check engine light may come on.

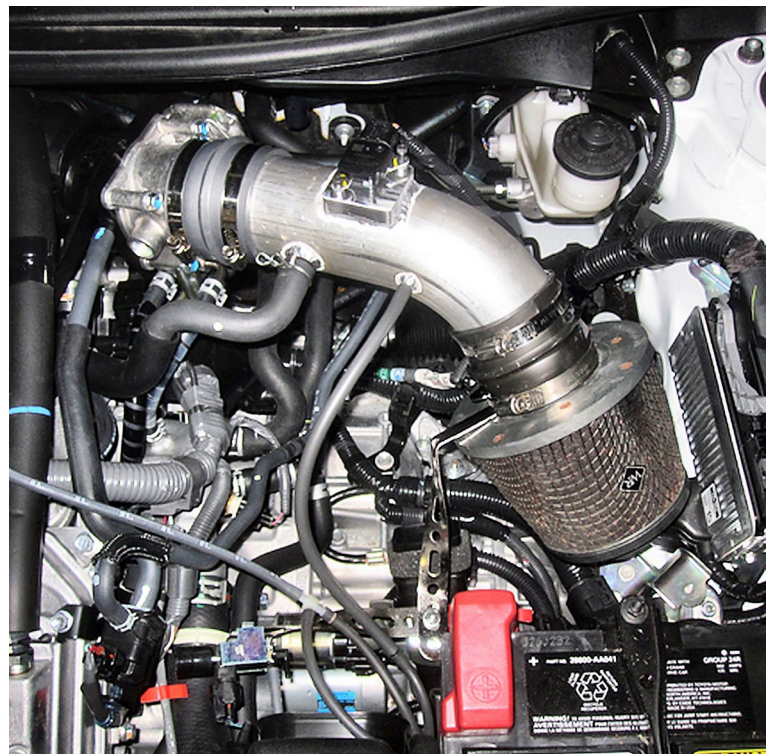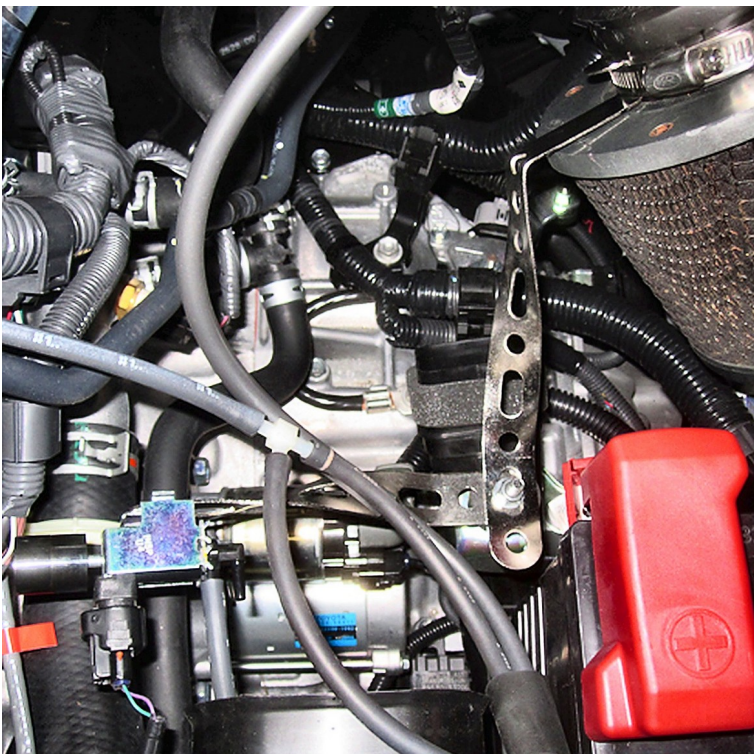

Intake System Bracket Video



Air Filter Cleaning Video