

**Secret Weapon: 307-211-101 / 2013-2016 Chevy Malibu 4cyl 2.5L****CARB EO#: N/A****Secret Weapon: 307-211-101 / 2014-2015 Chevy Impala 4cyl 2.5L****CARB EO#: N/A**

**Parts List :** 2 x Weapon\*R Intake pipe / 1 x Weapon\*R Air Filter 3" / 1 x 2.75" -3 " Coupler / 2 x 2.75"-2.75" Coupler  
1 x 12 " long 10mm hose / 1 x 15mm hose / 1 x Intake System Bracket kit / 5 x 3" Clamp

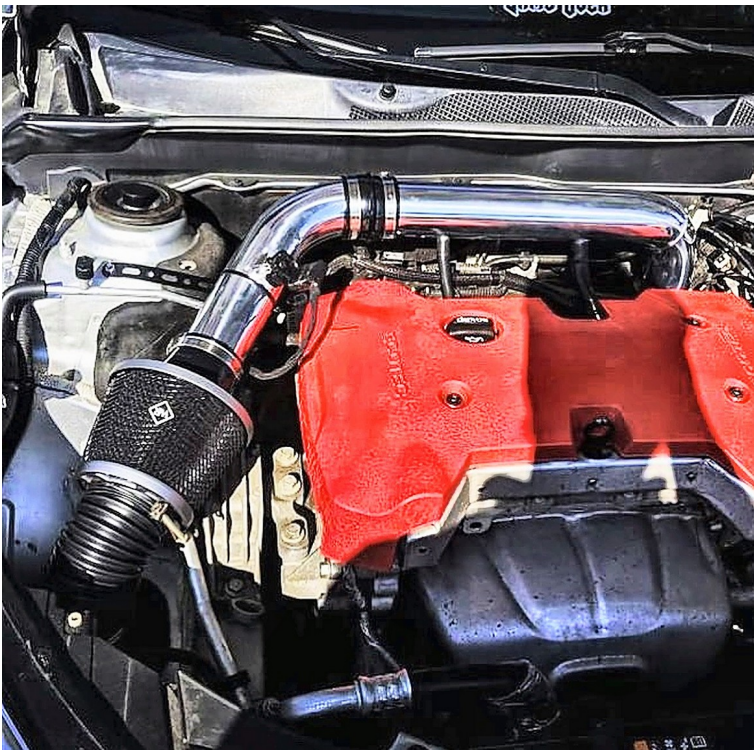
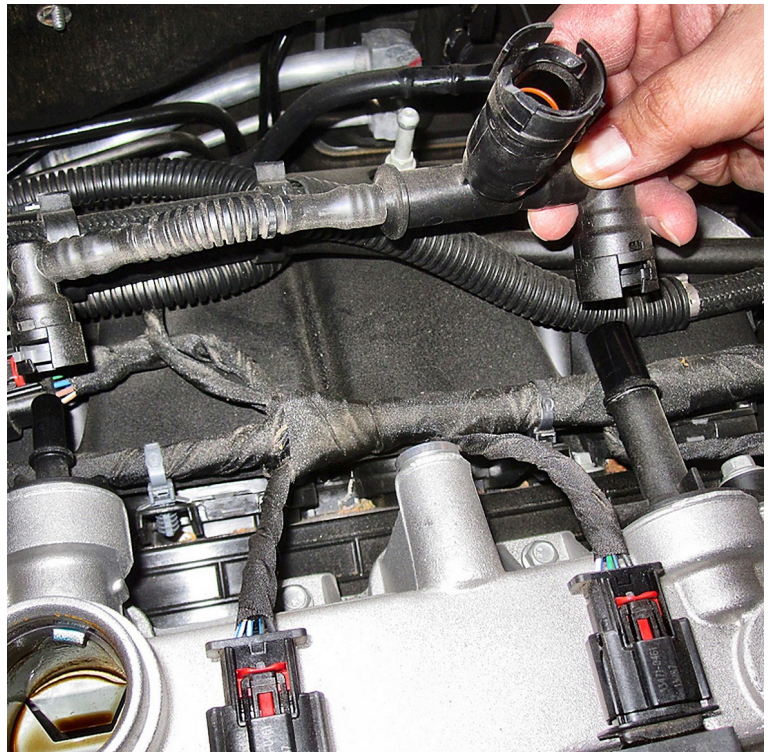
- 1 Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
- 2 Disconnect wire harness on MAF, Unbolt the MAF sensor from air box.
- 3 Unclip 1" Hose from Rear of OEM Air box and set aside and leave there (AIR HOSE REMAINS DO NOT REMOVE)
- 4 Remove the OEM rubber intake tube and Air box carefully remove MAF sensor from OEM air box.
- 5 Remove Upper intake air plenum box and remove rubber elbow connected to throttle body.
- 6 Remove OEM vacuum clip from motor ( pictured below)
- 7 Wipe throttle body of any grease Install 2.75"-2.75" Coupler and clamp down Install 1st WR pipe into coupler and clamp down.
- 8 Install 2.75"-2.75" Coupler onto end of 1st WR pipe and clamp down.
- 9 Cut 15mm WR hose to length and install to pipe and install to engine location (PICTURED BELOW)
- 10 Cut 10mm WR hose to length and install to pipe and install to engine location (PICTURED BELOW)
- 11 Install 2nd WR intake pipe into 2.75" Coupler and clamp down.
- 12 Install MAF sensor into Weapon\*R pipe and screw down.
- 13 Install the Weapon\*R 2.75"-3" couple on to end of 2nd WR pipe and and clamp down.
- 14 Insert the WR Filter into the 3" coupler and clamp down.
- 15 Place the U-shaped end of the bracket under the clamp on the air filter.
- 16 Install the rubber mounting grommet to the OEM Location where AIR box was Bolted to.
- 17 Bend the straight end of the bracket to meet the rubber mounting grommet.
- 18 Secure with the washer and nut from the bracket kit.
- 19 Position the intake pipe so it does not touch any part of the vehicle.
- 20 Check hood clearance. Adjust the intake tube for the best fit and clearance.
- 21 Place the Weapon\*R CARB sticker in a visible spot in the engine bay (if applicable).

**Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

**DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.**

**Note:** Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!  
Report any defective or missing parts to the authorized Weapon\*R dealer you bought this product from.  
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

**Note:** After installing the intake, start the engine and let it idle to operating temperature before driving.  
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

**Intake System Bracket Video****Air Filter Cleaning Video**