US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 308-118-101 / 2002-2005 Mini Cooper S — CARB EO#: D-489-3

Secret Weapon: 308-118-101 / 2006 Mini Cooper S — CARB EO#: N/A

Dragon Intake: 808-118-101 / 2002-2006 Mini Cooper S — CARB EO#: N/A


Parts List : 1 x Weapon*R Intake pipe/ Shield / 1 x Weapon*R Air Filter / 1 x 3/8" "T" Fitting / 1 x 10mm hose
1 x 2.75-2.75" Coupler / 1 x Weapon*R Air Shield / 1 x Intake Bracket kit / 1 x 3" Coupler
3 x 3" Clamps

1. Loosen clips onto of OEM air box top, Loosen clamp on throttle body & OEM intake tube.
2. Disconnect the 10mm PCV hose on OEM intake pipe. (Picture 1)
3. Remove the top of the OEM air box, remove the OEM air filter. (Picture 2)
4. Place the 2.75"-2.75" Coupler onto the throttle body and clamp down with the OEM clamp.
5. Insert the Weapon*R intake pipe into the coupler on throttle body.
6. Re-install the OEM 10mm PCV hose onto the Weapon*R intake pipe.
7. Attach Weapon*R Filter to end of Weapon*R Intake Pipe, clamp down.
8. The air filter on the intake system will sit inside the Bottom of the OEM air box. (Picture 4)
9. Install the 3" coupler on the intake pipe. Tighten with the supplied clamp.
10. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
11. Place the U-shaped end of the bracket under the clamp on the air filter.
12. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
13. Bend the straight end of the bracket to meet the rubber mounting grommet.
14. Secure with the washer and nut from the bracket kit.
15. Position the intake pipe so it does not touch any part of the vehicle.
16. Check hood clearance. Adjust the intake tube for the best fit and clearance.
17. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

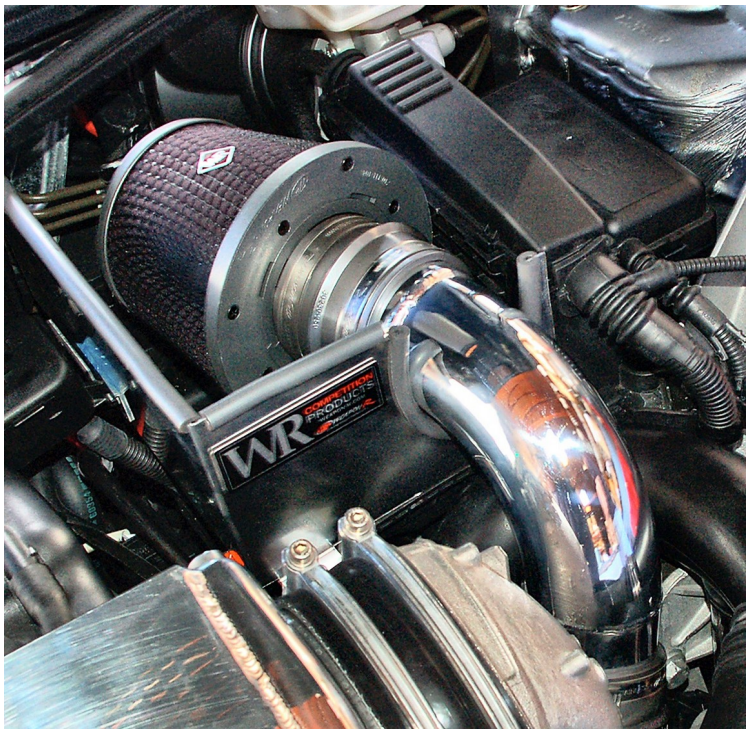







Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280