

Secret Weapon: 601-153-101 / 2008-2012 Ford Escape 3.0L V6


CARB EO#: N/A

- Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter / 1 x 10mm hose / 1 x 3"-3" Coupler
1 x 2.5"-3" coupler / 1 x Intake System Bracket kit / 1 x 3" clamp
- 1 Remove the emissions box from OEM tube, Disconnect the plastic PCV 15mm hardline from OEM intake pipe.
 - 2 Loosen the OEM air box and rubber intake tube, disconnect the MAF sensor harness from OEM air box Carefully remove the MAF sensor from the OEM air box, remove the rubber intake tube and OEM air box.
 - 3 Place the 2.5"-3" coupler onto the throttle body and secure with the OEM clamp.
 - 4 Place Weapon*R Intake Tube into the 3" end of the coupler and secure with a clamp.
 - 5 Install a small 4" piece of the 10mm line onto the WR 10mm port on tube.
 - 6 Reinstall the OEM PCV line into the 4" 10mm stub.
 - 7 Install the MAF sensor onto the Weapon-R intake pipe, secure with OEM screws, reconnect harness.
 - 8 Insert the Weapon*R filter into the intake pipe, secure with a clamp.
 - 9 Install 3"-3" coupler onto Secret Weapon air filter, secure with supplied clamp.
 - 10 Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
 - 11 Place the U-shaped end of the bracket under the clamp on the air filter.
 - 12 Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
 - 13 Bend the straight end of the bracket to meet the rubber mounting grommet.
 - 14 Secure with the washer and nut from the bracket kit.
 - 15 Position the intake pipe so it does not touch any part of the vehicle.
 - 16 Check hood clearance. Adjust the intake tube for the best fit and clearance.
 - 17 Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).
- Note: Only some early models used a MAF sensor. Disregard MAF info if not applicable to your vehicle.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

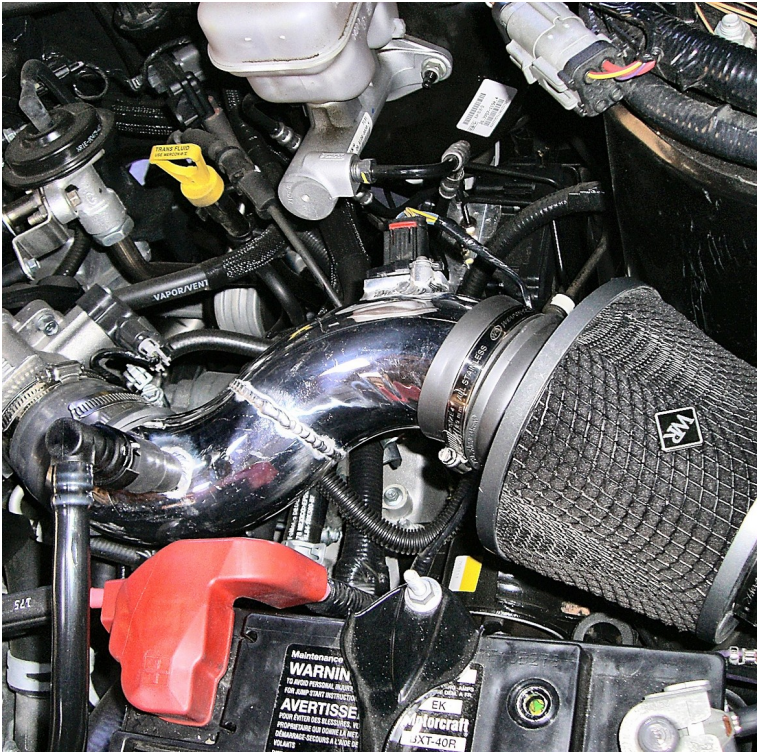

Intake System Bracket Video



Air Filter Cleaning Video