US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles.

Parts : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 1 x 15mm x 12" Hose / 2 x 3" Coupler


1 x 4mm T fitting / 1 x Intake System Bracket kit / 4 x 3" Clamp

1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2 Remove PCV hose from OEM intake and engine.
3 Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM airbox,
4 Remove all the 4mm lines from OEM airbox and set aside
5 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
6 Wipe the throttlebody clean of any grease, install the 3" coupler onto throttlebody, secure with OEM clamp.
7 Insert Weapon*R intake pipe into the 3" coupler, secure with clamp.
8 Measure the OEM PVC hose, replace with supplied 15mm hose, install from PVC port to intake pipe.
9 Install MAF sensor into Weapon*R intake pipe, reconnect MAF sensor harness.
10 Install the 3" coupler onto intake pipe, secure with supplied clamp.
11 Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
12 Install 4mm T fitting into 4mm OEM lines that were se aside from step 4. (see left lower Picture Below)
13 Install U-shaped part of intake system bracket under the clamp on air filter.
14 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
15 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
16 Secure with washer and nut included in bracket kit.
17 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
18 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
19 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION. Returned Products may be subject to a 25% restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !

Note: Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.
After installation of intake. Start engine and idle until normal operating temperature. Do NOT rev engine until engine is properly warmed up. Failure to do so may cause check engine light to come on.
Oil , Coolant Tanks also available, Please refer to our website @ WWW.WEAPON-R.COM, Tech help @ Tel#650-877-8280

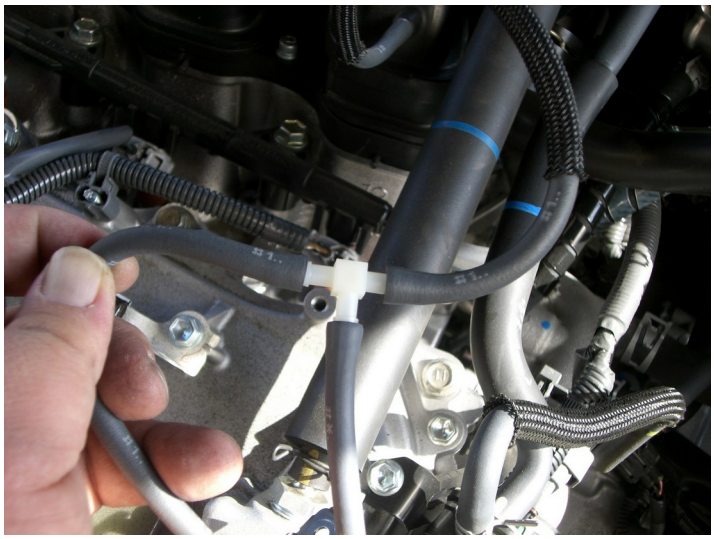



Bracket Video

Air Filter Cleaning Video

Question & Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280