US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles.

Hyper Intake: 907-121 / Dragon Intake : 807-121 / 2000-03 Ford ZX3 2.0L / FOCUS Ztec 2.0L

CARB EO# N/A

Parts : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 15mm x 12" Hose / 4 x 3" coupler
1 x 2.5"- 3" Coupler / 1 x Intake System Bracket kit / 8 x 3" Clamp / 1 x WR Aluminum Elbow

1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2 Remove the PCV hose from OEM intake and engine.
3 Unplug and remove MAF sensor from OEM intake.
4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
5 Wipe the throttlebody clean of any grease, install the 2.5-3" coupler onto throttlebody, secure with OEM clamp.
6 Install WR Aluminum elbow into 3" side of 2.5"-3" Coupler , secure with clamp.
7 Install 3"-3" Coupler onto WR Aluminum Elbow and clamp down
8 Install WR pipe into WR 3"-3" Coupler on WR Aluminum and secure wit hclamp
9 Measure the OEM PVC hose, replace with supplied 10mm hose, install from PVC port to intake pipe.
10 Install the hoses from their point of origin and onto the Weapon *R intake pipe.
11 Install 3" coupler onto end of intake pipe, secure with clamp.
12 Insert MAF unit into the 3" coupler, secure with clamp.
13 Install the Weapon*R Hyper filter onto front of MAF.

Note: Dragon Filter Option :

14 Install 3" coupler onto Dragon air filter, secure with supplied clamp.
15 Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
16 Install U-shaped part of intake system bracket under the clamp on air filter.
17 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
18 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
19 Secure with washer and nut included in bracket kit.
20 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
21 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
22 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

Note: Returned Products may be subject to a 25% restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !

Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.


Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

After installation of intake. Start engine and idle until normal operating temperature. Do not rev engine until engine is properly warmed up. Failure to do so may cause check engine light to come on.

SW Intake install with Ram Air Kit II as shown. . . . . .

2001 Focus ZX3 2.0L Ztec installation on picture. . . . .

Fuel Pressure regulator kit also available for this vehicle , for more info check our website.

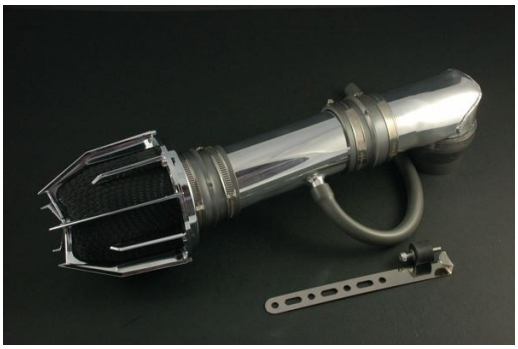



Bracket Video

Air Filter Cleaning Video

Question & Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280