

Secret Weapon: 307-199-101 / 2010-2012 Ford Fusion V6 3.0L

CARB EO#: N/A

Secret Weapon: 307-199-101 / 2010-2011 Mercury Milan V6 3.0L

CARB EO#: N/A


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 15mm Hose
1 x 2.75"-2.75" Coupler / 1 x 2.75"-3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp

- 1 Remove 2 x Clamps on OEM rubber intake pipe.
- 2 Unclip and Remove 2 x PCV hose from OEM intake and engine locations.
- 3 Disconnect the MAF sensor harness, Remove Bolts securing top portion of OEM cleaner box.
- 4 Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
- 5 Remove remaining bolts on lower intake box and remove OEM lower intake box Unscrew 2 screws holding MAF sensor to OEM cleaner box and lift out the MAF sensor Wipe the throttle body clean of any grease, install the 2.5"-3" coupler onto throttle body, secure with OEM clamp.
- 6 Insert Weapon*R intake pipe into the 3" Side of coupler, secure with a clamp.
- 7 Measure and cut a piece of the WR 10mm vacuum line. Use to attach the OEM PCV tube to the WR intake pipe.
- 8 Measure and cut 15mm hose and attach to WR intake pipe and to Engine PCV port on valve cover.
- 9 Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
- 10 Install the 2.75"-3" coupler onto the end of the intake pipe, secure with supplied clamp.
- 11 Install filter assembly onto the end of the 3" Weapon*R coupler on pipe, secure with OEM clamp.
- 12 Place the U-shaped end of the bracket under the clamp on the air filter.
- 13 Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
- 14 Bend the straight end of the bracket to meet the rubber mounting grommet.
- 15 Secure with the washer and nut from the bracket kit.
- 16 Position the intake pipe so it does not touch any part of the vehicle.
- 17 Check hood clearance. Adjust the intake tube for the best fit and clearance.
- 18 Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

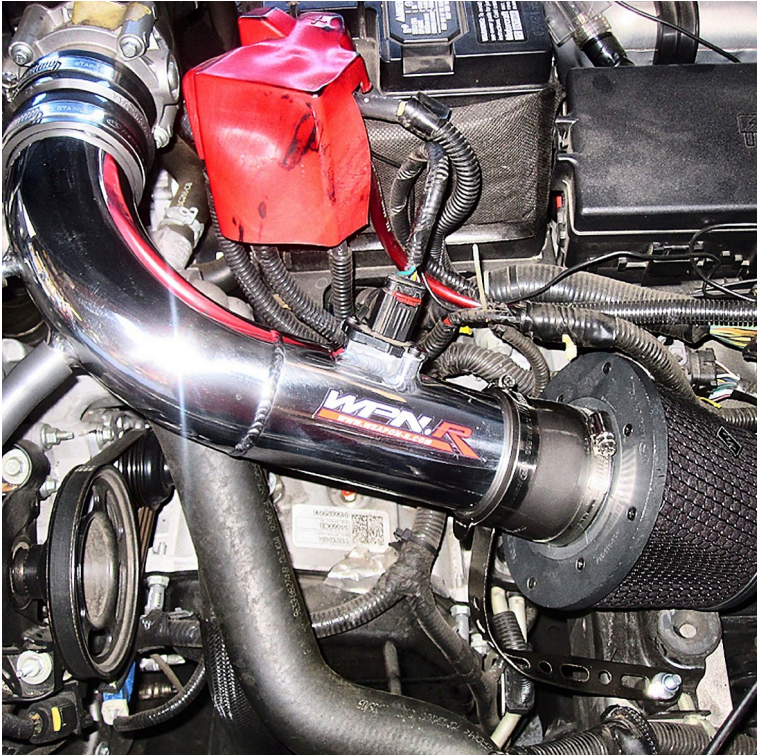

Intake System Bracket Video



Air Filter Cleaning Video