WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 301-170-301 / 2010-2011 Honda Civic Si 2.0L

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x Black AIT Grommet
1 x 2.75"- 3" Coupler / 1 x 2.75"-2.75" Coupler / 1 x Intake System Bracket kit / 4 x 3" clamp


1. Loosen the OEM airbox and rubber intake tube, disconnect the MAF sensor harness from OEM airbox
2. Remove OEM hardline assembly from OEM Rubber intake
3. Carefully remove the MAF sensor from the OEM airbox, remove the rubber intake tube
4. Remove OEM upper airbox lid, and unbolt lower airbox from Vehicle and remove lower intake box
5. Place the 2.75"- 2.75" coupler onto the throttle body and secure with the OEM clamp.
6. Install the MAF sensor onto the Weapon-R intake pipe, secure with black screws.
7. Place Weapon*R Intake Tube into the 2.75" end of the coupler and secure with clamp.
8. Install Black Grommet into Hole on Weapon-R pipe
9. Install OEM Hardline into Black Grommet by pushing hardline into grommet
10. Install 2.75"-3" coupler onto Secret Weapon air filter, secure with supplied clamp.
11. **Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.**
12. Install U-shaped part of intake system bracket under the clamp on air filter.
13. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
14. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
15. Secure with washer and nut included in bracket kit.
16. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
17. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
18. Place Weapon*R CARB Sticker on a visible place in engine compartment. **(If Applicable)**

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.



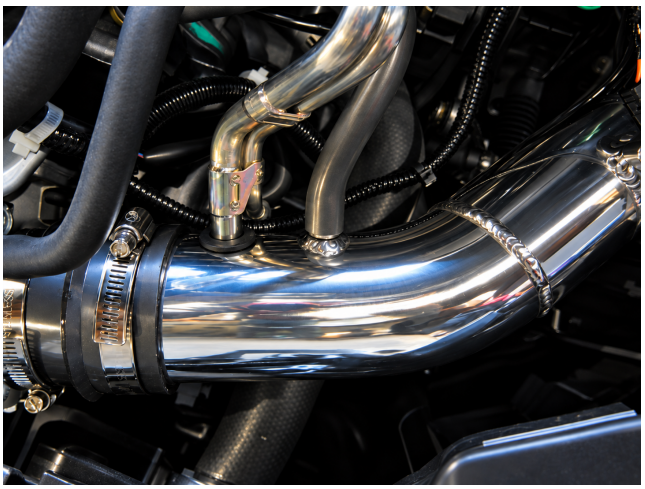



Question about this Product Tel# 650-877-8280 / WEAPON-R.COM