WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 301-141-101 / 2002-2006 ACURA RSX TYPE S N/A

Dragon Intake: 301-141-101 / 2002-2006 ACURA RSX TYPE S CARB #D-489-2

Parts List : *1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 15mm Hose / 1 x 10mm hose /*
1 x 2.75-3" Silicon Adapter Hose / 1 x 3"-3" Coupler / 1 x Intake System Bracket kit / 3 x Stainless Steel Clamp


1. Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2. Carefully disconnect the AIT sensor harness on the OEM rubber intake pipe, remove AIT sensor.
3. Remove the coolant transfer / 15mm PCV hardline from from OEM intake and engine.
4. Remove the 10mm air recirculator hose on OEM intake pipe,
5. Mark the coolant tranfer hose origins, install the 10mm hose supplied in kit to those 2 locations.
6. Remove the OEM ruber intake tube, remove the OEM air cleaner box by pulling upwards.
7. Wipe the throttlebody clean of any grease, install the 2.75 - 3" coupler onto throttlebody, secure with OEM clamp.
8. Insert the Weapon*R intake pipe into the 2.75 - 3" coupler and secure with clamp.
9. Measure and cut to length the 15mm PVC hose removed, from valve cover port and to Weapon*R intake pipe,
10. Install the 10mm hose onto the Air recirculator port on engine and to the Weapon *R intake pipe.
11. Insert the Weapon*R filter into the intake pipe, secure with clamp.
12. Install the 3" - 3" coupler onto the Weapon*R intake pipe, secure with OEM clamp.
13. Install Dragon air filter into coupler, secure with supplied clamp.
14. Install U-shaped part of intake system bracket under the clamp on air filter.
15. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
16. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
17. Secure with washer and nut included in bracket kit.
18. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
19. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
20. Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.



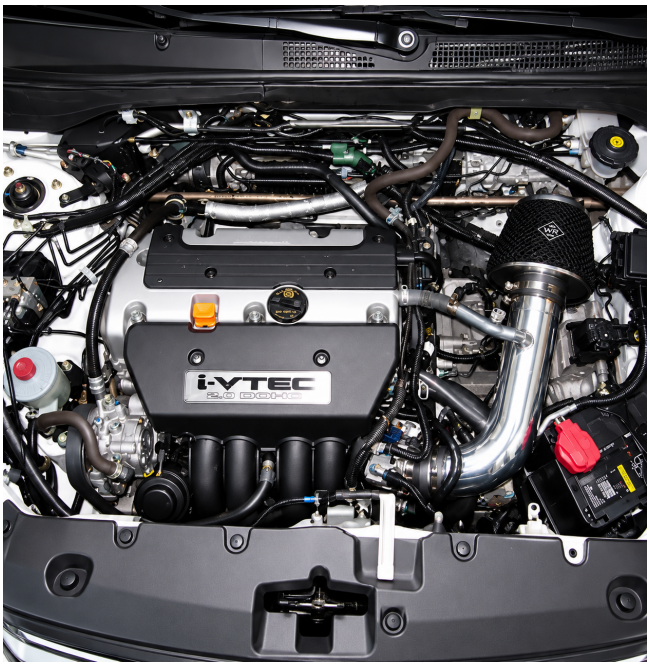

Question about this Product, Tech assistance @ Tel#650-877-8280 / WEAPON-R.COM