WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 301-149-101 / 03-06 HONDA ELEMENT 2.4L N/A

Dragon Intake: 801-149-101 / 03-06 HONDA ELEMENT 2.4L - 04 Year CARB Exempt CARB# D489-2


Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 10mm x 12" hose/ 1 x black grommet
1 x 6" x 1" hose / 1 x 3" Coupler / 1 x Intake System Bracket kit / 1 x 3" clamp, 1 x 3" Coupler / 2 x 3" Clamp

1. Remove the PVC emissions box from OEM tube, Disconnect the plastic EVAP hardline from OEM intake pipe.
2. Loosen the OEM airbox and rubber intake tube, disconnect the MAF sensor harness from OEM airbox
3. Remove the top portion of OEM airbox by unclipping from bottom protion.
4. Locate 10mm bolts securing bottom airbox to car and unbolt to remove bottom portion of airbox.
5. Disconnect AIT sensor harness, and 8mm OEM vacume from Oem tube and remove OEM tube.
6. Place the 3" - 3" coupler onto the throttle body and secure with the OEM clamp.
7. Place Weapon*R Intake Tube into the 3" end of the coupler and secure with clamp.
8. Install 1" hose onto 1" port on pipe, insert the PVC box into the 1" hose, secure with supplied clamps.
9. Install the 8mm hose onto the 8mm port on intake pipe and the plastic EVAP hardline on the engine .
10. Install black grommet into WR intake tube, and insert AIT sensor into grommet.
11. Reconnect AIT sensor harnes to AIT sensor in WR intake tube.
12. Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
13. Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
14. Install U-shaped part of intake system bracket under the clamp on air filter.
15. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
16. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
17. Secure with washer and nut included in bracket kit.
18. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
19. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
20. Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.

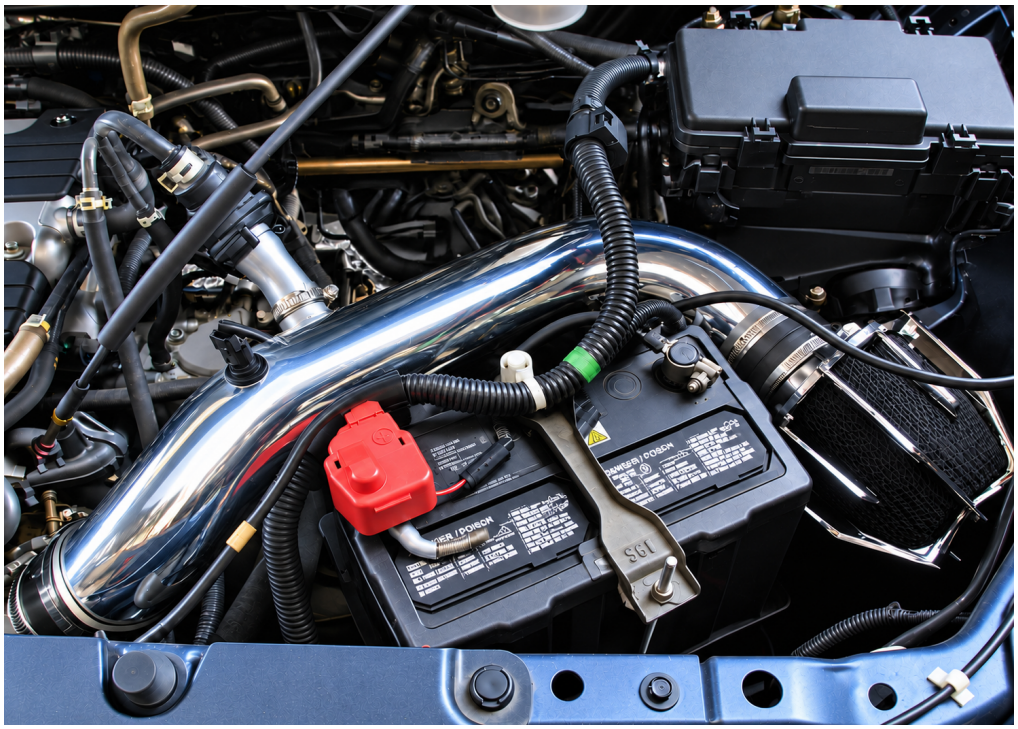

Email your installed pictures of your WR product for a chance to receive a free gift., Tel#650-877-8280