US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 301-155-101 / 02-05 ACURA MDX V6

Dragon Intake: 801-155-101 / 02-05 ACURA MDX V6

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 10mm Hose
1 x 3” Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp/ 1 X T fitting

Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.


1. Remove the stock crank case vent tube from oem intake tube.
2. Disconnect the idle air bypass control valve from stock intake tube.
3. Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
4. Wipe the throttlebody clean of any grease or dirt, install the 3" coupler onto throttlebody, secure with OEM clamp.
5. Insert the intake pipe into 3" coupler on throttlebody, secure with supplied clamp.
6. Install the 10mm silicone hose onto the Weapon *R intake pipe, and reconnect to PCV port on motor.
7. Reconnnect idle air bypass valve to WR tube using other 10mm silicone vacume line.
8. If you have 3rd vacume port use "T" fitting to adapt it to the 10mm line.
9. Install 3" coupler onto Secret Weapon air filter, secure with supplied clamp.
10. Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
11. Install U-shaped part of intake system bracket under the clamp on air filter.
12. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
13. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
14. Secure with washer and nut included in bracket kit.
15. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
16. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
17. Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.



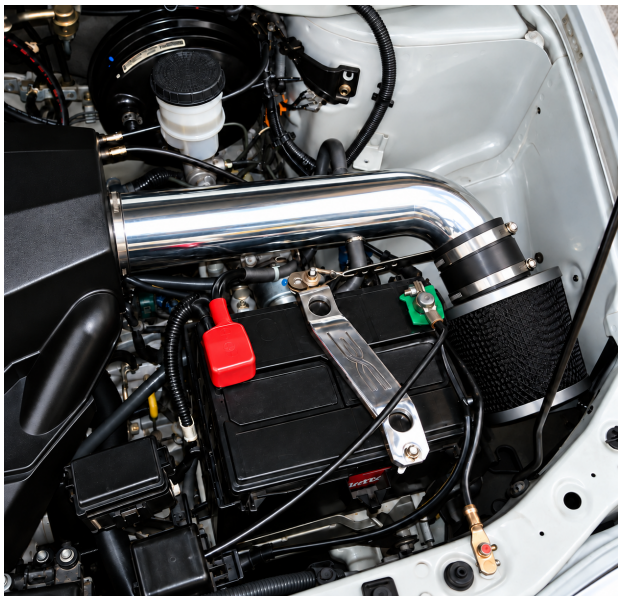

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280