US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 302-111-101 / 93-98 Mazda MX6 / 626 V6 2.5L — CARB EO#: D-489-3

Secret Weapon: 307-119-101 / 93-98 Ford Probe V6 — CARB EO#: N/A

Dragon Intake (Mazda): 802-117-101 / 93-98 MX6 V6 & 802-111-101 / 93-98 MX3 V6 & 802-115-101 / 90-92 RX7 — CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 3 x 2.5"-3" Coupler
1 x 3"-3" Coupler / 1 x 3"-3.5" Coupler / 1 x Intake System Bracket kit / 3 x 3" Clamp


1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the AIT sensor from the OEM air box.
3. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
4. Wipe any grease off the MAF. Install the 2.5"-3" coupler on the throttle body and tighten with the OEM clamp.
5. Insert the Weapon*R intake pipe into the 3" end of the 2.5"-3" coupler. Tighten with a clamp.
6. Install a 2.5"-3" coupler on the end of the intake pipe. Tighten the clamp on the 3" side.
7. Install the MAF on the 2.5" side of the coupler and tighten the clamp.
8. Install the 2.5" side of the last 2.5"-3" coupler on the other end of the MAF and tighten the clamp.
9. Install the 10mm hose on the intake pipe. Insert the AIT sensor into the hose and reconnect the harness.
10. Install the Weapon*R filter on the 3" side of the last coupler and tighten the clamp.
11. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
12. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
13. Place the U-shaped end of the bracket under the clamp on the air filter.
14. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
15. Bend the straight end of the bracket to meet the rubber mounting grommet.
16. Secure with the washer and nut from the bracket kit.
17. Position the intake pipe so it does not touch any part of the vehicle.
18. Check hood clearance. Adjust the intake tube for the best fit and clearance.
19. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.



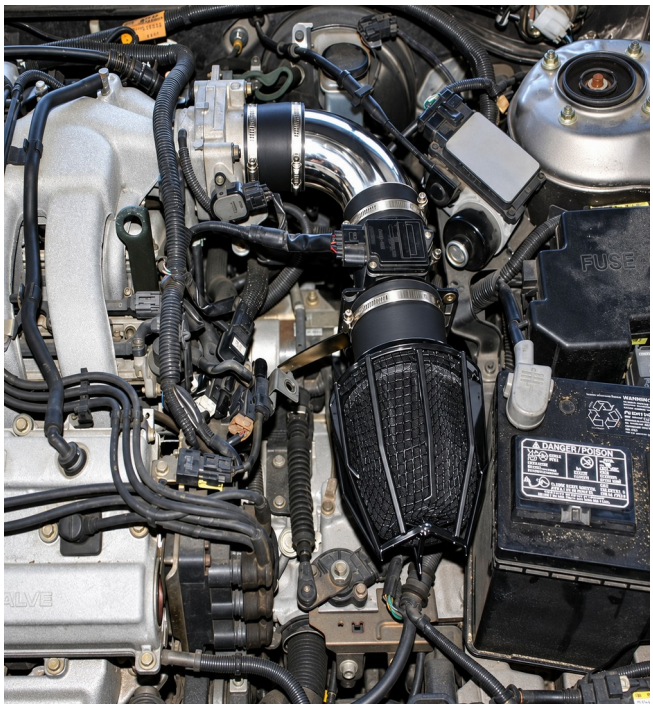

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280