US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 305-113-101 / 1990-1999 Toyota Celica	CARB EO#: D-489-3
Secret Weapon: 305-118-101 / 1996-2000 TOYOTA RAV4	CARB EO#: N/A


Dragon Intake: 805-113-101 / 1990-1997 Toyota Celica	CARB EO#: D-489-1
Dragon Intake: 805-113-101 / 1998-1999 Toyota Celica	CARB EO#: N/A
Dragon Intake: 805-118-101 / 1997-2000 Toyota RAV4	CARB EO#: D-489-2
Dragon Intake: 805-118-101 / 1996 Toyota RAV4	CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 2.5"-3" Coupler
1 x 3"-3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp / 1 x 10mm AIT Grommet

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hose from the OEM intake and engine.
3. Disconnect the AIT sensor harness, remove AIT sensor from OEM air box.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Wipe any grease off the throttle body. Install the 2.5"-3" coupler on the throttle body and tighten with the OEM clamp.
6. Install the 10mm AIT grommet onto the Weapon*R intake pipe, insert the AIT sensor into grommet.
7. Insert the Weapon*R intake pipe into the 3" end of the 2.5"-3" coupler. Tighten with a clamp.
8. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
9. Reconnect the AIT harness onto the AIT sensor.
10. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
11. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
12. Place the U-shaped end of the bracket under the clamp on the air filter.
13. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
14. Bend the straight end of the bracket to meet the rubber mounting grommet.
15. Secure with the washer and nut from the bracket kit.
16. Position the intake pipe so it does not touch any part of the vehicle.
17. Check hood clearance. Adjust the intake tube for the best fit and clearance.
18. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.

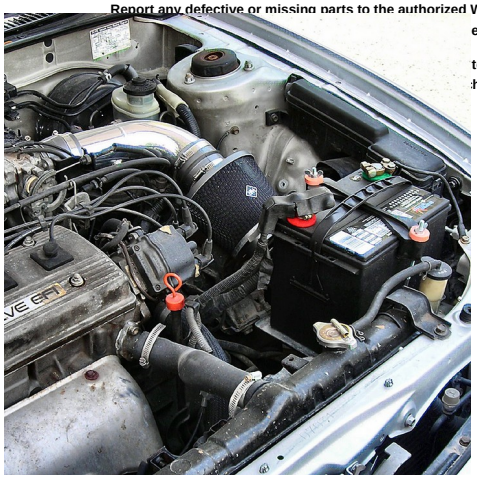







Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280