WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 305-144-101 / 2002-2006 Toyota Camry 4Cyl **CARB EO#: N/A**

Dragon Intake: 805-144-101 / 2002-2006 Toyota Camry 4Cyl **CARB EO#: N/A**


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 15mm hose
1 x 2.75"-2.75" Coupler / 1 x 2.75"-3" Coupler / 1 x Intake System Bracket kit / 1 x 3" Clamp

1. Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2. Remove the PCV hose from the OEM intake and engine.
3. Unplug the MAF sensor and carefully remove it from the OEM air box.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Wipe any grease off the throttle body. Install the 2.75"-2.75" coupler on the throttle body and tighten with the OEM clamp.
6. Insert Weapon*R intake pipe into the 2.75"-2, 75" coupler, secure with a clamp.
7. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
8. Insert the 15mm hose into the 15mm port on pipe, Insert the Air recirculator valve port into on pipe.
9. Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
10. Install the 2.75"-3" coupler onto intake pipe, secure with supplied clamp.
11. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
12. Place the U-shaped end of the bracket under the clamp on the air filter.
13. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
14. Bend the straight end of the bracket to meet the rubber mounting grommet.
15. Secure with the washer and nut from the bracket kit.
16. Position the intake pipe so it does not touch any part of the vehicle.
17. Check hood clearance. Adjust the intake tube for the best fit and clearance.
18. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

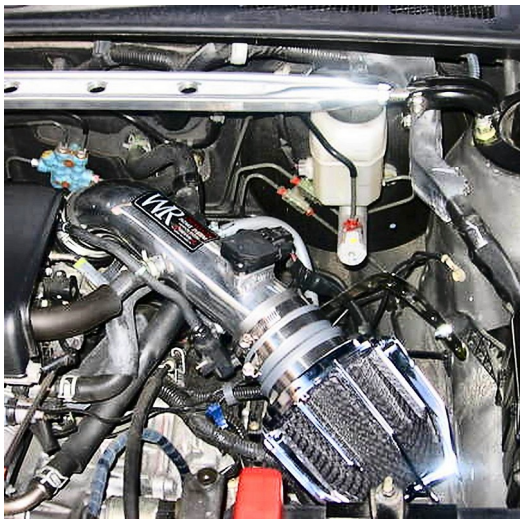







Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280