WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 305-151-101 / 2002-2005 TOYOTA CAMRY 3.0L / 3.3L V6 — **CARB EO#: N/A**

Dragon Intake: 805-151-101 / 2002-2005 TOYOTA CAMRY — **CARB EO#: N/A**

Dragon Intake: 805-151-101 / 2002-2005 SOLARA V6 — **CARB EO#: N/A**


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 2 x 3"-3" silicone coupler
1X 15mm Hose / 1 x Intake System Bracket kit / 1 x Plastic "T" fitting / 2 x 3" Clamps


1. Unplug the MAF sensor and carefully remove it from the OEM air box.
2. Disconnect the OEM 4mm lines from top of OEM air box and put aside for later use.
3. Remove air recirculator valve & hose from OEM intake and engine.
4. Remove bolts securing OEM air cleaner box, remove OEM air intake box.
5. Place 3"-3" coupler over the throttle body and clamp down.
6. Insert WR intake tube into 3" side of reducer and clamp down.
7. Install 15mm hose from pipe to valve cover PCV port.
8. Using Plastic "T" fitting reconnect the 3 x 4mm lines all together. (see pic 1 below)
9. Install the 10mm hose onto the air recirculator valve and onto the Weapon*R intake pipe.
10. Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
11. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
12. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
13. Place the U-shaped end of the bracket under the clamp on the air filter.
14. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
15. Bend the straight end of the bracket to meet the rubber mounting grommet.
16. Secure with the washer and nut from the bracket kit.
17. Position the intake pipe so it does not touch any part of the vehicle.
18. Check hood clearance. Adjust the intake tube for the best fit and clearance.
19. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

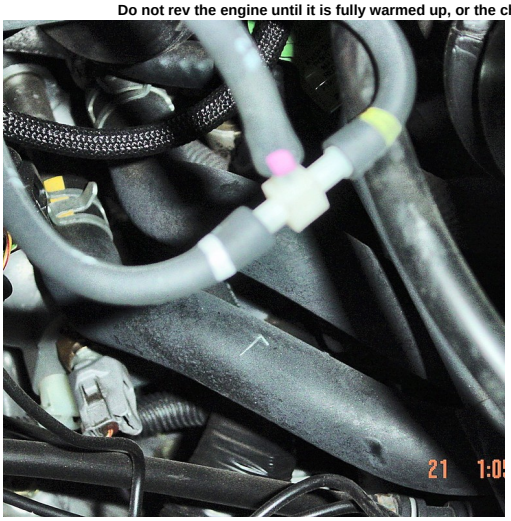

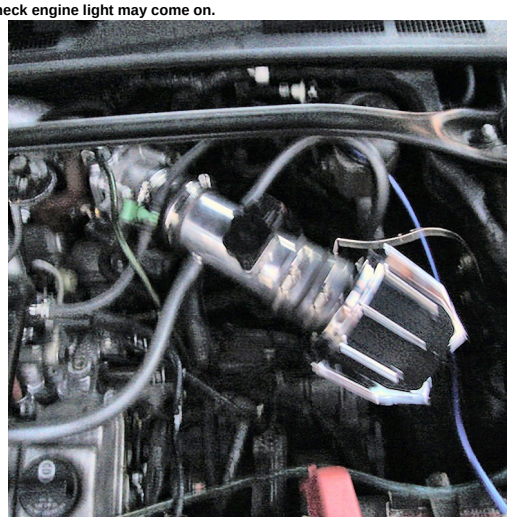





Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280