WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 305-167-101 / 2008-2009 RAV 4 3.5L V6 **CARB EO#: N/A**

Dragon Intake: 805-167-101 / 2008-2009 Toyota RAV 4 V6 **CARB EO#: N/A**

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 15mm Hose/ 4 mm vacuum Cap
1 x Intake System Bracket kit / 1 x plastic "T" fitting 4mm / 2 x 3" Coupler / 4 x 3" Clamps


1. Unplug the MAF sensor and carefully remove it from the OEM air box.
2. Remove air Switching valve from OEM intake and engine.
3. Disconnect the 2 x 4mm lines from the OEM air box, and put aside.
4. Remove OEM air box, Disconnect OEM 15mm hose from OEM intake tube and remove tube.
5. Install 3"-3" coupler onto throttle body and secure with a clamp.
6. Install WR intake pipe into 3" coupler and secure with a clamp.
7. Install the OEM 15mm hose onto WR intake tube and secure with OEM clamp.
8. Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
9. Also connect the one 4mm line from switching valve to the 4mm "T" fitting.
10. Install the 3" coupler on the Secret Weapon air filter. Tighten with the supplied clamp.
11. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
12. Place the U-shaped end of the bracket under the clamp on the air filter.
13. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
14. Bend the straight end of the bracket to meet the rubber mounting grommet.
15. Secure with the washer and nut from the bracket kit.
16. Position the intake pipe so it does not touch any part of the vehicle.
17. Check hood clearance. Adjust the intake tube for the best fit and clearance.
18. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



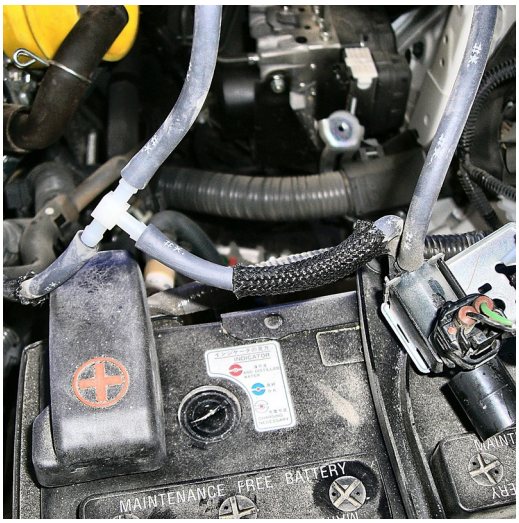



Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280