US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 306-117-101 / 2005-2007 Subaru Forester	**CARB EO#: N/A**
Secret Weapon: 306-117-101 / 2005-2007 Impreza	**CARB EO#: N/A**
Secret Weapon: 306-117-101 / 2005-2007 Outback 2.2L & 2.5L Non Turbo ONLY	**CARB EO#: N/A**


Dragon Intake: 806-117-101 / 2005-2007 Subaru Forester	**CARB EO#: N/A**
Dragon Intake: 806-117-101 / 2005-2007 Impreza	**CARB EO#: N/A**
Dragon Intake: 806-117-101 / 2005-2007 Outback (Non Turbo applications)	**CARB EO#: N/A**


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter / 2 x 10mm Hose / 1 x 2.75" coupler
1 x Intake System Bracket kit / 1 x 2.75"-3" Coupler / 4 x 3" Clamp / 1 x Grommet / 1 x "T" Fitting

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hoses from the OEM intake and engine.
3. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
4. Remove MAF sensor from factory air box, install onto Weapon*R intake pipe with supplied hardware.
5. Wipe any grease off the throttle body. Install the 2.75" coupler on the throttle body and tighten with the OEM clamp.
6. Insert the Weapon*R intake pipe into the 2.75" coupler. Tighten with a clamp.
7. Use vacuum cap to cap off port on pipe closest to filter end of tube. DO NOT USE THIS PORT FOR VACUME.
8. Measure from valve cover PCV port to intake pipe port. Replace with supplied 10mm hoses.
9. Use "T" fitting to crankcase PCV port to 10mm port on intake pipe. Replace with supplied 10mm hose.
10. Special Note: 9 | Later models may have an AIT sensor, Drill a 3/8" hole on pipe from throttle body side about 4" away from end. insert & secure supplied round black grommet into drilled hole, insert & secure AIT sensor into grommet.
11. Stretch the 2.75"-3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
12. Install filter assembly onto the Weapon*R Intake Pipe, secure with a clamp.
13. Place the U-shaped end of the bracket under the clamp on the air filter.
14. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
15. Bend the straight end of the bracket to meet the rubber mounting grommet.
16. Secure with the washer and nut from the bracket kit.
17. Position the intake pipe so it does not touch any part of the vehicle.
18. Check hood clearance. Adjust the intake tube for the best fit and clearance.
19. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).
Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!

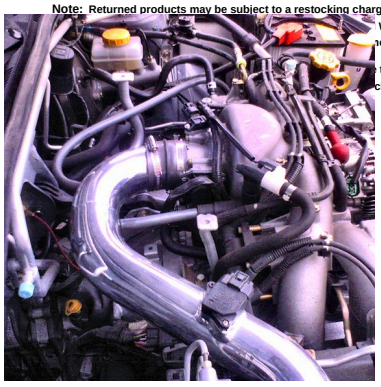

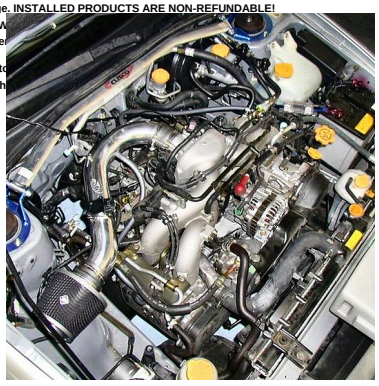





Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280