WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-111-101 / 96-03 Chevy Cavalier 4cyl / 96-03 Pontiac Sunfire 4cyl	**CARB #D-489-3**
90-02 Pontiac Grand Am 4cyl / 98-2003 Malibu 4cyl / 90-94 Chev Beretta 4cyl / 96-98 Olds Achieva 4cyl	**N/A**
Dragon Intake: 807-111-101 / 96-03 Chevy Cavalier 4cyl / 96-03 Pontiac Sunfire 4cyl	**N/A**
90-02 Pontiac Grand Am 4cyl / 98-2003 Malibu 4cyl / 90-94 Chev Beretta 4cyl / 96-98 Olds Achieva 4cyl	**N/A**

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 1 x 10mm x 6" Hose
1 x 2.5"- 3" Coupler / 2 x 3"-3" Coupler / 1 x Intake System Bracket kit / 3 x 3" Clamp


1. Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2. Remove the AIT sensor from the OEM air cleaner box.
3. Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
4. Install the 2.5"-3" coupler onto the air resonator box, secure with OEM clamp.
5. Insert Weapon*R intake pipe into the 3" end of the 2.5"-3" coupler, secure with clamp.
6. Install the 10mm hose onto the intake pipe, insert the AIT sensor into the 10mm hose.
7. Install the Weapon*R Hyper filter onto the end of the intake pipe.
8. Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
9. Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
10. Install U-shaped part of intake system bracket under the clamp on air filter.
11. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
12. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
13. Secure with washer and nut included in bracket kit.
14. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
15. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
16. Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.



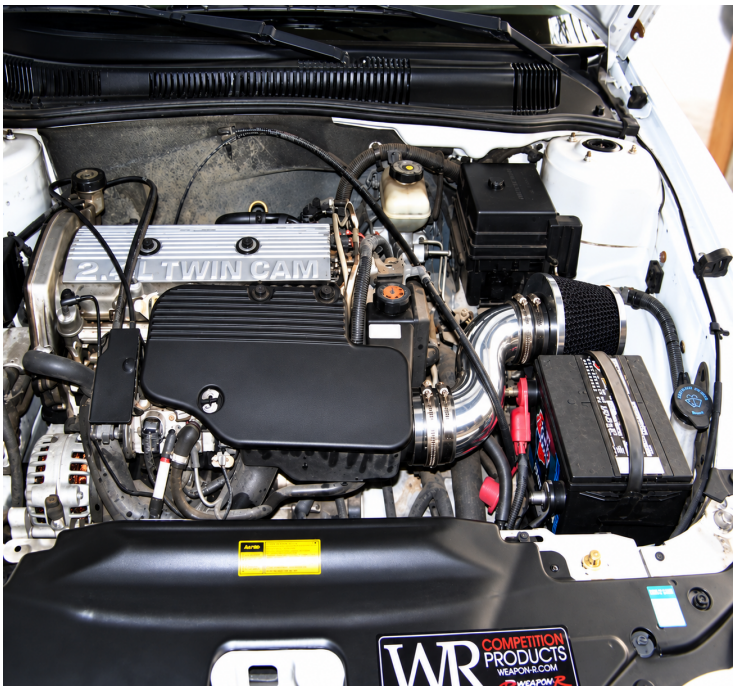

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280