US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-144-101 / 2003-2005 Dodge Neon SRT- 4 — **CARB EO#: N/A**

Dragon Intake: 807-144-101 — **CARB EO#: N/A**

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 3"-3" Coupler
1 x 2.5"-3" Coupler / 1 x Intake System Bracket kit / 4 x 3" Clamp / 1 x black rubber grommet


1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hose from the OEM intake and engine.
3. Remove AIT sensor from OEM air box and disconnect from wire harness and put aside.
4. Remove and put aside the check valve bracket.
5. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
6. Wipe the Turbo clean of any grease, install the 2.5"-3" coupler onto Turbo inlet, secure with OEM clamp.
7. Insert the Weapon*R intake pipe into the 2.5"-3" coupler. Tighten with a clamp.
8. Bolt down WR pipe to OEM 10mm location on valve cover. (pic #1)
9. Install check valve bracket to WR pipe bracket and bolt down. (pic #2)
10. Install boost vacuum solenoid hose to WR small intake port on tube(pic#3)
11. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
12. Install the grommet into bottom of WR pipe, and Insert AIT sensor into grommet and reconnect wire harness to AIT.
13. Install the 3"-3" coupler onto intake pipe, secure with supplied clamp.
14. Install filter assembly onto the end of MAF sensor, secure with OEM clamp.
15. Place the U-shaped end of the bracket under the clamp on the air filter.
16. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
17. Bend the straight end of the bracket to meet the rubber mounting grommet.
18. Secure with the washer and nut from the bracket kit.
19. Position the intake pipe so it does not touch any part of the vehicle.
20. Check hood clearance. Adjust the intake tube for the best fit and clearance.
21. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



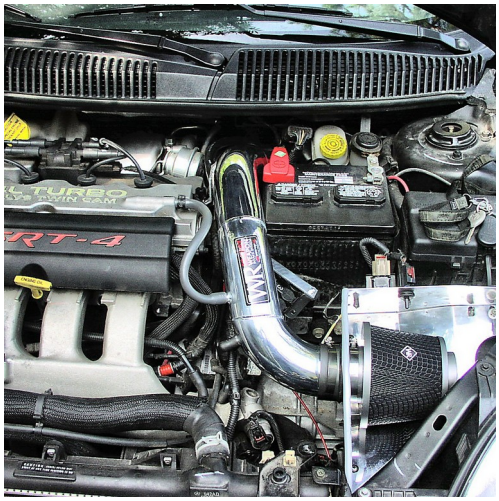





Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280