WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-152-101 / 2004-2006 STRATUS 2.7L — CARB EO#: N/A

Dragon Intake: 807-152-101 / 2004-2006 STRATUS 2.7L — CARB EO#: N/A


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x BLACK Silicone Elbow / 2 x 3"-3" Coupler
1 x Intake System Bracket kit / 3 x 3" Clamp / 1 x 4" Clamp

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove PCV hose from top of OEM intake tube and put aside.
3. Disconnect the AIT sensor harness, carefully remove AIT sensor from OEM air box.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Wipe the throttle body clean, install the WR Black Silicone Elbow onto throttle body, secure with OEM clamp.
6. Insert Weapon*R intake pipe into the WR Black elbow secure with a clamp.
7. Install the AIT sensor into the Black Elbow in intake tube, reconnect AIT sensor harness.
8. Install OEM PCV hose into port on WR intake tube.
9. Install the 3"-3" coupler onto intake pipe, secure with supplied clamp.
10. Install filter assembly onto the end of MAF sensor, secure with OEM clamp.
11. Place the U-shaped end of the bracket under the clamp on the air filter.
12. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
13. Bend the straight end of the bracket to meet the rubber mounting grommet.
14. Secure with the washer and nut from the bracket kit.
15. Position the intake pipe so it does not touch any part of the vehicle.
16. Check hood clearance. Adjust the intake tube for the best fit and clearance.
17. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

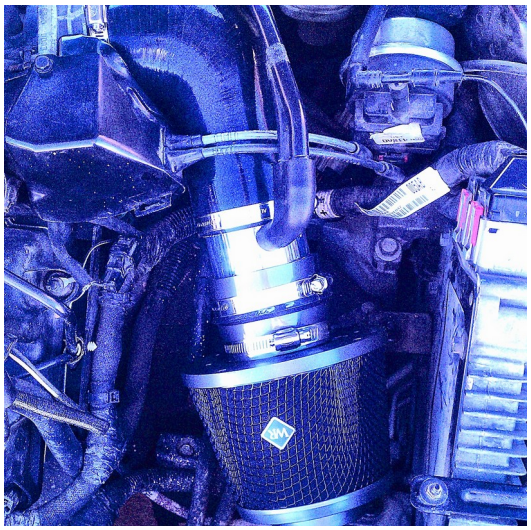







Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280