WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-153-101 / 2003-2004 Saturn ION	**CARB EO#: N/A**
Secret Weapon: 307-153-101 / 2000-2003 Saturn L200 4cyl DOHC 2.2L	**CARB EO#: N/A**
Dragon Intake: 807-153-101 / 2003-2005 Saturn ION	**CARB EO#: N/A**
Dragon Intake: 807-153-101 / 2000-2003 Saturn L200 4cyl DOHC	**CARB EO#: N/A**


Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter / 1 x 10mm Hose / 1 x 3" Elbow / 1x2.5"-3" Coupler 2x3"-3" coupler / 1 x Intake Bracket kit / 1x3" Clamp / 1 x AIT Sensor Grommet

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Disconnect and remove the PCV hose from the OEM intake and engine.
3. Disconnect AIT sensor harness from OEM tube, remove AIT sensor from OEM tube.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Remove OEM air cleaner box on top of throttle body.
6. Wipe any grease off the throttle body. Install the 2.5"-3" coupler on the throttle body and tighten with the OEM clamp.
7. Install Silicone elbow to 2.5" side of throttle body and clamp down.
8. Insert Weapon*R intake pipe into the 3" end of the Silicone elbow, secure with a clamp.
9. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
10. Install the AIT sensor grommet in the 15mm hole on the Weapon*R intake pipe. Insert the AIT sensor and plug it in.
11. Reconnect the hoses from their original ports to the Weapon*R intake pipe.
12. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
13. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
14. Place the U-shaped end of the bracket under the clamp on the air filter.
15. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
16. Bend the straight end of the bracket to meet the rubber mounting grommet.
17. Secure with the washer and nut from the bracket kit.
18. Position the intake pipe so it does not touch any part of the vehicle.
19. Check hood clearance. Adjust the intake tube for the best fit and clearance.
20. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.



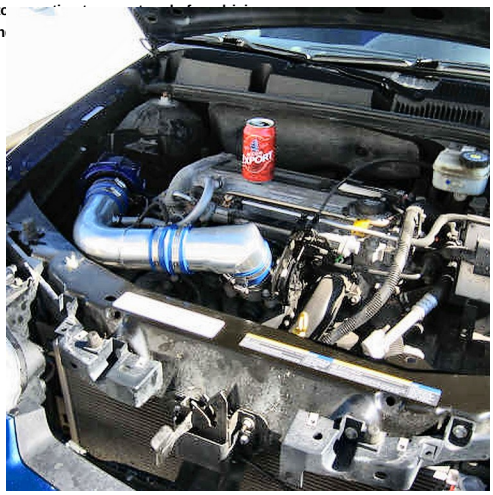





Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280