US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 342-117-101 / 03-07 Hyundai Tiburon 4cyl	**CARB EO#: D-489-3**
Secret Weapon: 342-118-101 / 03-06 Hyundai Tiburon V6	**CARB EO#: D-489-3**
Secret Weapon: 342-119-101 / 03-06 Hyundai Elantra 4cyl	**CARB EO#: D-489-3**
Secret Weapon: 342-117-101 / 08 Tiburon 4cyl & 342-118-101 / 07-08 Tiburon V6 & 342-119-101 / 07-08 Elantra 4cyl	**CARB EO#: N/A**

Dragon Intake: 842-117-101 / 03-08 Hyundai Tiburon 4cyl	**CARB EO#: N/A**
Dragon Intake: 842-118-101 / 03-08 Hyundai Tiburon V6	**CARB EO#: N/A**
Dragon Intake: 842-119-101 / 03-08 Hyundai Elantra 4cyl	**CARB EO#: N/A**

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter / 2 x 3"-3.5" coupler / 1 x 3"-4" coupler
1 x Intake Bracket kit / 3 x 3" Clamp / 3 x 4" clamps / 1 x Blank MAF adapter plate with 4 bolts

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Disconnect the 15mm PCV hose from the OEM intake.
3. Unplug the MAF sensor, remove it from the OEM intake, and set it aside.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Install the 3" coupler on the throttle body. Tighten with the OEM clamp.
6. Insert the Weapon*R intake pipe into the coupler. Tighten with a clamp.
7. Connect the OEM 15mm hose to the Weapon*R intake pipe.
8. Install the 3"-3" coupler on the MAF sensor. Tighten the clamp.
9. Insert the MAF sensor into the end of the Weapon*R intake tube. Tighten the clamp.
10. Mount the MAF bracket on the OEM MAF with the 4 supplied bolts.
11. Install the 3" coupler on the Dragon or Secret Weapon air filter. Tighten with the supplied clamp.
12. Install the filter assembly on the MAF bracket plate. Tighten with the OEM clamp.
13. Place the U-shaped end of the bracket under the clamp on the air filter.
14. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
15. Bend the straight end of the bracket to meet the rubber mounting grommet.
16. Secure with the washer and nut from the bracket kit.
17. Position the intake pipe so it does not touch any part of the vehicle.
18. Check hood clearance. Adjust the intake tube for the best fit and clearance.
19. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).


DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.





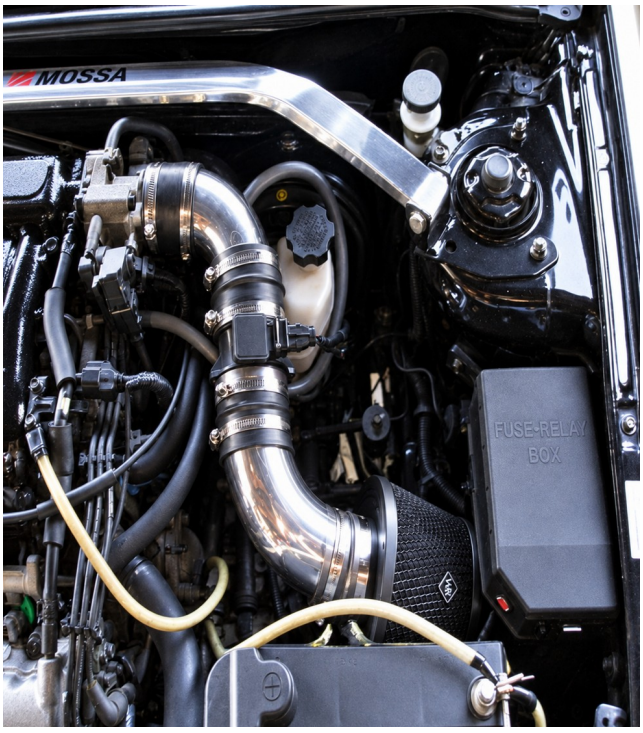

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280