US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 342-124-101 / 2009-2011 Hyundai Elantra 2.0L **CARB EO#: N/A**

Dragon Intake: 842-124-101 / 2009-2011 Hyundai Elantra 2.0L **CARB EO#: N/A**

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 3"-3" Coupler
2 x 2.5"-3" Coupler / 1 x 2.75"-2.75" Coupler / 1 x Intake System Bracket kit / 6 x 3" Clamp, 1 x ECU Bracket Relocation kit


1. Loosen the clamps on the OEM rubber intake tube, disconnect the PCV hose, and remove the rubber tube.
2. Unplug the MAF sensor harness (some models do not have a MAF sensor).
3. Remove the 2 x 10mm bolts holding the MAF to the top of the air box. Remove the MAF and set it aside.
4. Remove the 2 x 10mm bolts that hold the ECU to the side of the air box.
5. Remove the bolts holding the OEM air box assembly and remove the air box.
6. Remove the 2 x 10mm bolts holding the ECU and unclip the ECU body clips. Set the ECU aside.
7. Bolt the ECU relocation bracket to the vehicle with one of the ECU hold-down bolts.
8. Slide the ECU into the bracket and bolt it in with the 2 x 10mm long bolts.
9. Wipe any grease off the throttle body. Install the 2.75"-2.75" coupler on the throttle body and tighten with the OEM clamp.
10. Insert the Weapon*R intake pipe into the 2.75" side of the coupler. Tighten with a clamp.
11. Hold the MAF and install the 2.5"-3" coupler on the back side of the MAF. Tighten the clamp.
12. Install the other 2.5"-3" coupler on the MAF. Tighten the clamp.
13. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
14. Install the Secret Weapon air filter on the 3" side of the 2.5"-3" coupler on the MAF. Tighten with the supplied clamp.
15. Place the U-shaped end of the bracket under the clamp on the air filter.
16. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
17. Bend the straight end of the bracket to meet the rubber mounting grommet.
18. Secure with the washer and nut from the bracket kit.
19. Position the intake pipe so it does not touch any part of the vehicle.
20. Check hood clearance. Adjust the intake tube for the best fit and clearance.
21. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



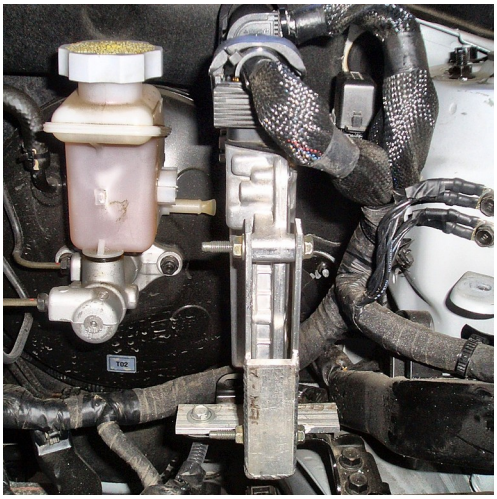





Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280