US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 304-128-101 / 1995-2001 Nissan Maxima V6 CARB EO# N/A

Dragon Intake: 804-128-101 / 1995-2001 Nissan Maxima V6 CARB EO# N/A

Dual pipe section should be installed toward the throttle body.

Parts : 2 x Intake pipe. / 1 x Air Filter / 3 x 3" coupler / 1 x 4mm x 12" hose / Blank AFM Plate
2 x 15mm x 12" hose / 1 x 2.5”- 3” Coupler / 1 x Intake Bracket kit / 8 x 3" Clamp/ 1 x pipe with grommet

1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2 Remove the 15mm PCV and 10mm Air recirculator hoses from OEM intake.
3 Remove the 4mm hose form the air resonator box on OEM intake pipe.
4 Unplug and remove the MAF sensor from the air intake system.
5 Unplug AIT harness and remove the AIT sensor from OEM airbox.
6 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
7 Install the 2.5-3" coupler onto throttle body, secure with OEM clamp.
8 Insert Weapon*R intake pipe into the coupler, secure with clamp.
9 Install the supplied 15mm hose onto the intake pipe and to the PCV valve on valve cover.
10 Install the supplied 10mm hose onto the intake pipe and to the air recirculator valve.
11 Install the supplied 4mm hose onto the intake pipe and to the air resonator box.
12 Install the 3" coupler onto end of intake pipe, secure with clamp.
13 Insert MAF into the 3" coupler, secure with clamp, connect MAF harness.
14 Line up the holes on MAF to the AFM-Blank adapter plate, secure with nuts and bolts in kit.
15 Install 3"-3" coupler onto MAF plate clamp down, and install WR tube with AIT grommet.
16 Re-install AIT sensor into grommet and plug harness into AIT sensor.
17 Install the Weapon*R Hyper filter onto AFM adapter plate..
18 Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
19 Install filter assembly onto the WR intake pipe, secure with OEM clamp.
20 Install U-shaped part of intake system bracket under the clamp on air filter.
21 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
22 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
23 Secure with washer and nut included in bracket kit.
24 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
25 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
26 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine

light to come on.



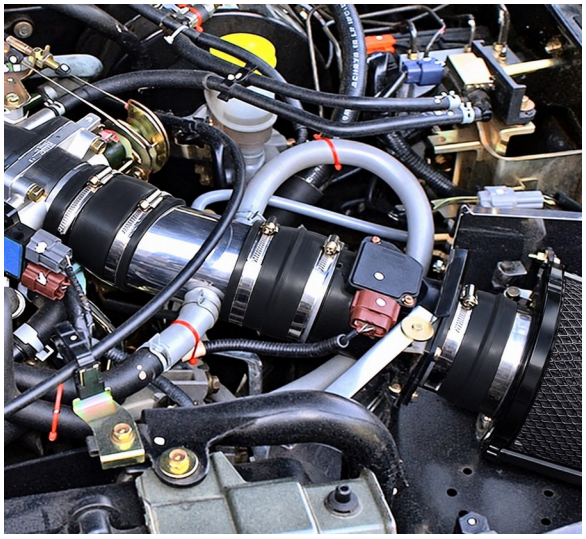

Bracket Video

Air Filter Cleaning Video

Question & Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280