US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 304-139-101 / 2009-2010 Nissan Cube 1.8L — CARB EO#: N/A

Parts List : 1 x Weapon*R Intake Pipe / 1 x Weapon*R Air Filter / 1 x 15mm Hose / 1 x 2.5"-3" Coupler
1 x 2.75"-3" Coupler / 1 x Intake System Bracket Kit / 4 x 3" Clamp

1. Loosen the OEM air box and rubber intake tube. Unplug the MAF sensor harness from the OEM air box.
2. You may need to remove the OEM battery for more room to install the intake.
3. Carefully remove the MAF sensor from the OEM air box. Remove the rubber intake tube and the OEM air box.
4. Install the 2.75"-3" coupler on the throttle body. Tighten with the OEM clamp.
5. Insert the Weapon*R intake tube into the 3" end of the coupler. Tighten with a clamp.
6. Connect the 15mm hose from the 15mm port on the intake pipe to the PCV port on the engine.
7. Install the MAF sensor on the Weapon*R intake pipe with the OEM screws. Reconnect the harness.
8. Insert the Weapon*R filter into the intake pipe. Tighten with a clamp.
9. Install the 2.5"-3" coupler on the Secret Weapon air filter. Tighten with the supplied clamp.
10. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
11. Place the U-shaped end of the bracket under the clamp on the air filter.
12. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
13. Bend the straight end of the bracket to meet the rubber mounting grommet.
14. Secure with the washer and nut from the bracket kit.
15. Position the intake pipe so it does not touch any part of the vehicle.
16. Check hood clearance. Adjust the intake tube for the best fit and clearance.
17. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).


Note: Only some early models use a MAF sensor. Skip the MAF steps if your vehicle does not have one.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



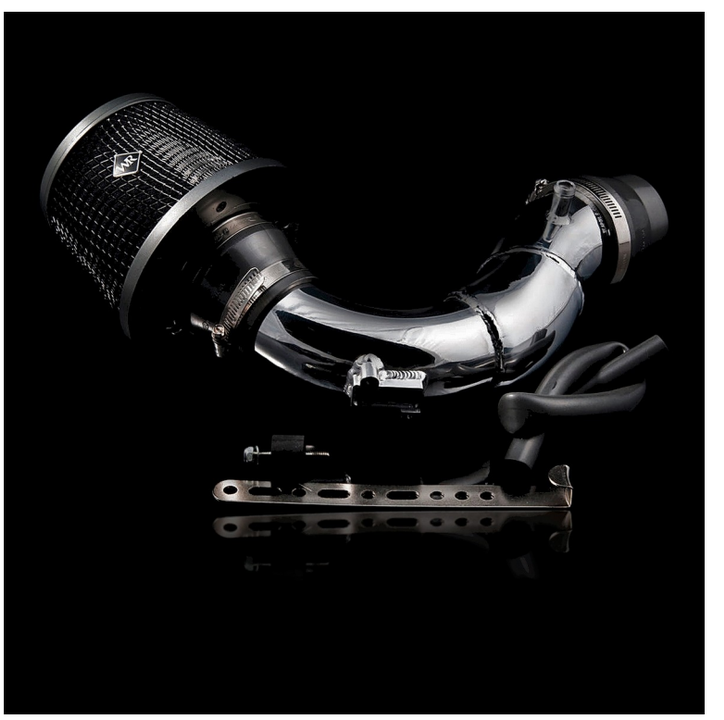

Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280