US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 306-113-101 / 2000-2004 Subaru Forester	CARB EO#: N/A
Secret Weapon: 306-113-101 / 2000-2001 Impreza	CARB EO#: N/A
Secret Weapon: 306-113-101 / 2000-2004 Legacy	CARB EO#: N/A
Secret Weapon: 306-113-101 / 2001-2004 Outback	CARB EO#: N/A
Dragon Intake: 806-113-101 / 2000-2002 Subaru Forester 2.5L	CARB EO#: D-489-2
Dragon Intake: 806-113-101 / 2000-2002 Impreza 2.5L	CARB EO#: D-489-2
Dragon Intake: 806-113-101 / 2000-2002 Legacy 2.5L	CARB EO#: D-489-2
Dragon Intake: 806-113-101 / 2001 Outback 2.5L	CARB EO#: D-489-1
Dragon Intake: 806-113-101 / 2003-2004 Forester	CARB EO#: N/A
Dragon Intake: 806-113-101 / 2003-2004 Impreza	CARB EO#: N/A
Dragon Intake: 806-113-101 / 2003-2004 Legacy	CARB EO#: N/A
Dragon Intake: 806-113-101 / 2002-2004 Outback	CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter / 2 x 10mm Hose / 1 x 2.75" coupler
1 x Intake System Bracket kit / 1 x 2.75"-3" Coupler / 4 x 3" Clamp / 1 x Grommet / 1 x T fitting

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hoses from the OEM intake and engine.
3. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
4. Wipe any grease off the throttle body. Install the 2.75" coupler on the throttle body and tighten with the OEM clamp.
5. Insert the Weapon*R intake pipe into the 2.75" coupler. Tighten with a clamp.
6. Measure from valve cover PCV ports to Tee fitting, and from Tee fitting to intake pipe. Replace with supplied 10mm hoses.
7. Measure from crankcase PCV port to 10mm port on intake pipe. Replace with supplied 10mm hose.
   Note: 8 | Later models may have an AIT sensor. Drill a 1/2" hole from throttle body side on pipe, insert supplied grommet, and insert AIT sensor into grommet.
8. Stretch the 2.75"-3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
9. Install filter assembly onto the Weapon*R Intake Pipe, secure with a clamp.
10. Place the U-shaped end of the bracket under the clamp on the air filter.
11. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
12. Bend the straight end of the bracket to meet the rubber mounting grommet.
13. Secure with the washer and nut from the bracket kit.
14. Position the intake pipe so it does not touch any part of the vehicle.
15. Check hood clearance. Adjust the intake tube for the best fit and clearance.
16. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

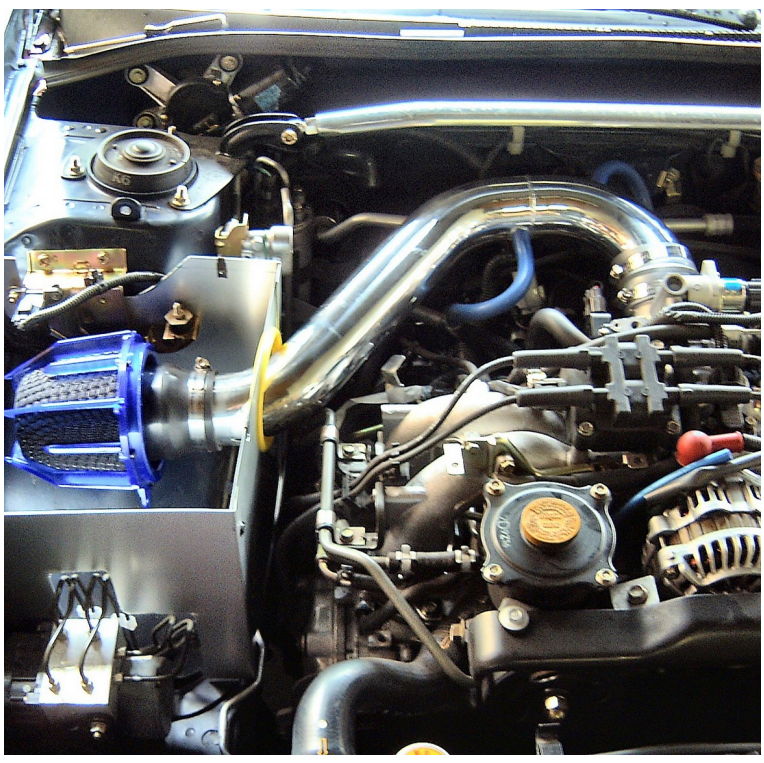

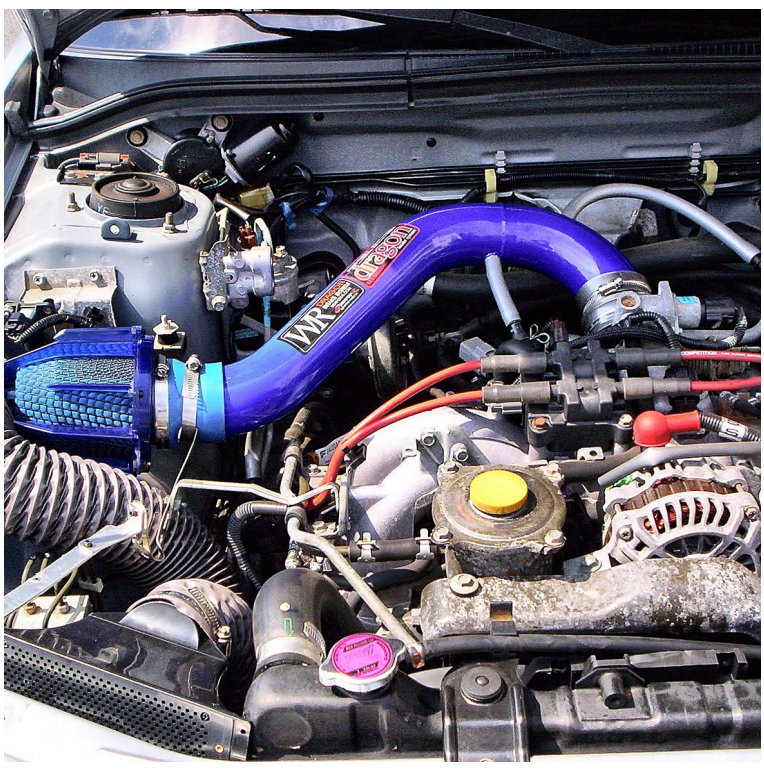





Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280