US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 306-120-101 / 2008-2013 Subaru WRX TURBO — CARB EO#: N/A

Secret Weapon: 306-120-101 / 2008-2013 IMPREZA GT TURBO — CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 2.75"-3" Coupler / 1 x 2.75" - 2.75" Coupler
1 x Intake System Bracket kit / 4 x 3" Clamp

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Unplug the MAF sensor and carefully remove it from the OEM air box.
3. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
4. Wipe the throttle pipe clean of any grease, install the 2.75" coupler onto throttle pipe, secure with OEM clamp.
5. Insert the Weapon*R intake pipe into the 2.75" coupler. Tighten with a clamp.
6. Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
7. Use WR grommet bracket, and bolt where the OEM was and secure intake pipe to WR grommet and bolt down Stretch the 2.75" end of the 2.75"-3" coupler onto intake pipe, secure with supplied clamp.
8. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
9. Place the U-shaped end of the bracket under the clamp on the air filter.
10. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
11. Bend the straight end of the bracket to meet the rubber mounting grommet.
12. Secure with the washer and nut from the bracket kit.
13. Position the intake pipe so it does not touch any part of the vehicle.
14. Check hood clearance. Adjust the intake tube for the best fit and clearance.
15. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



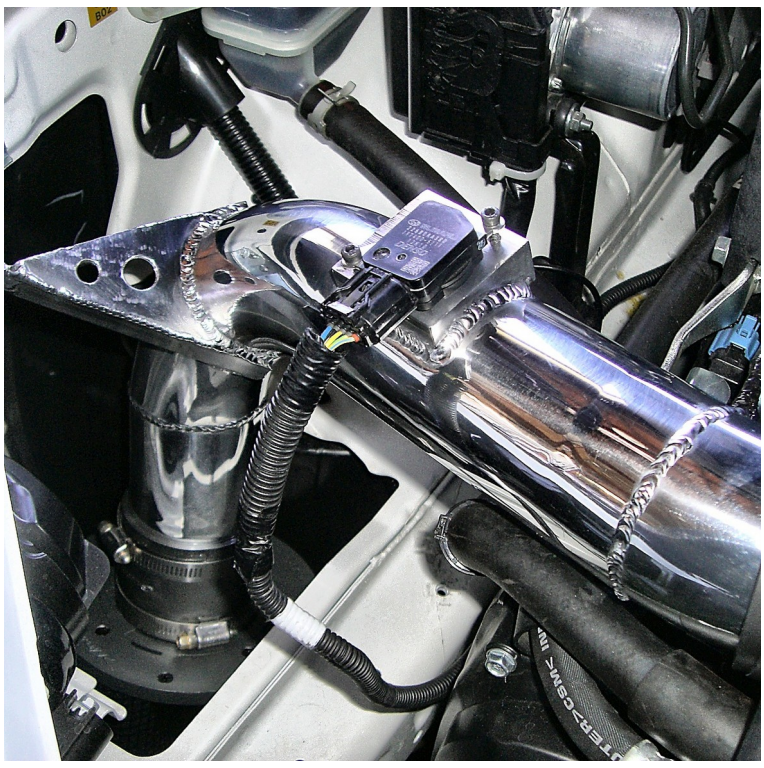



Intake System Bracket Video

Air Filter Cleaning Video