US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 306-122-101 / 2013-2016 Subaru BRZ 2.0L 4 cyl — CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x WR Air Shield / 1 x 15mm Hose
1 x 2.75" - 3" Coupler / 1 x 3"-3" Coupler / 1 x Intake System Bracket kit / 1 x 4mm Sliced hose
4 x 3" Clamp


1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Unclamp and lift PCV Elbow out from OEM tube and leave aside.
3. Disconnect the MAF sensor harness & carefully remove MAF sensor from OEM air box, Unclamp and remove the Sound Tube From OEM intake pipe Unclamp OEM tube and Remove the OEM rubber intake tube Unbolt OEM air box from front frame locations and lift out OEM air box assembly Wipe the throttle body clean of any grease, install the 3" -3" coupler onto throttle body, secure with a clamp.
4. Insert the Weapon*R intake pipe into the 3" coupler. Tighten with a clamp.
5. Cut a 4" Piece of 15mm Vacuum line, install onto WR pipe port and install OEM PCV plastic elbow into WR hose.
6. Install the MAF sensor in the Weapon*R intake pipe and plug the MAF back in.
7. Drop WR Air Shield into place and bolt to vehicles frame locations.
8. Install the 2.75" end of the 2.75"-3" coupler onto intake pipe, secure with supplied clamp.
9. Install the filter assembly on the end of the Weapon*R intake pipe. Tighten with the OEM clamp.
10. Install 4mm Sliced WR vacuum hose into curved Air Shield cutout where pipe goes through to protect WR Pipe.
11. Position the intake pipe so it does not touch any part of the vehicle.
12. Check hood clearance. Adjust the intake tube for the best fit and clearance.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



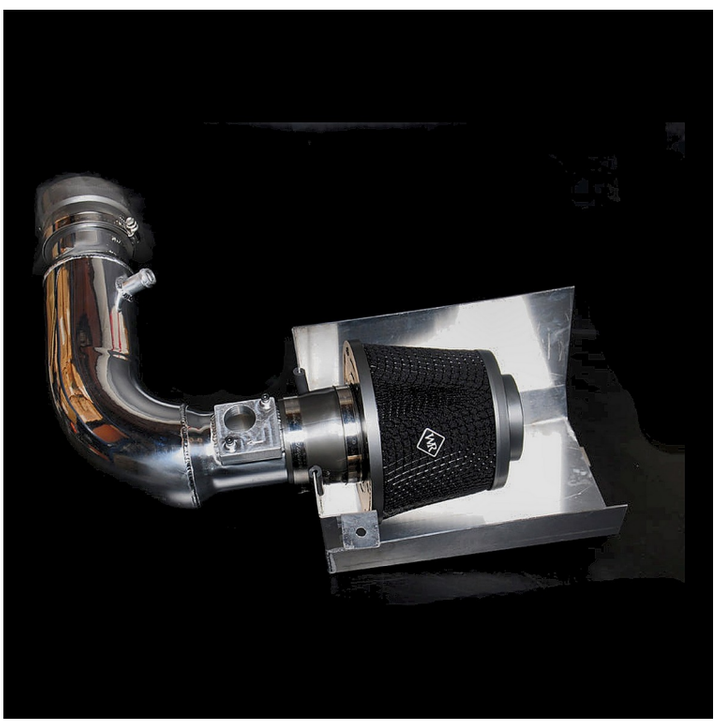

Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280