US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-150-101 / 2001-2003 STRATUS V6 2.7L — CARB EO#: N/A

Secret Weapon: 307-150-101 / 2001-2003 CHRYSLER SEBRING V6 — CARB EO#: N/A

Dragon Intake: 807-150-101 / 2001-2003 STRATUS V6 — CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 1 x 3"-3" Coupler
1 x 2.5"-3" coupler / 1 x Intake System Bracket kit / 4 x 3" Clamp
1 x Black silicone elbow with AIT


1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Remove the PCV hose from the OEM intake and engine.
3. Unplug AIT sensor from OEM plastic elbow, and remove carefully AIT sensor from elbow. Put aside.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Wipe the throttle body clean, install the WR Black silicone elbow onto throttle body, secure with OEM clamp.
6. Insert Weapon*R intake pipe into the end of 3" Black elbow and clamp down.
7. Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.
8. Reinsert AIT sensor into grommet that is in WR Black Elbow. Plug AIT sensor harness into AIT sensor.
   Note: Secret Weapon Filter Option.
9. Install 3"-3" coupler onto end of WR pipe and clamp down, then install WR filter onto end of 3" coupler.
10. Place the U-shaped end of the bracket under the clamp on the air filter.
11. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
12. Bend the straight end of the bracket to meet the rubber mounting grommet.
13. Secure with the washer and nut from the bracket kit.
14. Position the intake pipe so it does not touch any part of the vehicle.
15. Check hood clearance. Adjust the intake tube for the best fit and clearance.
16. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.



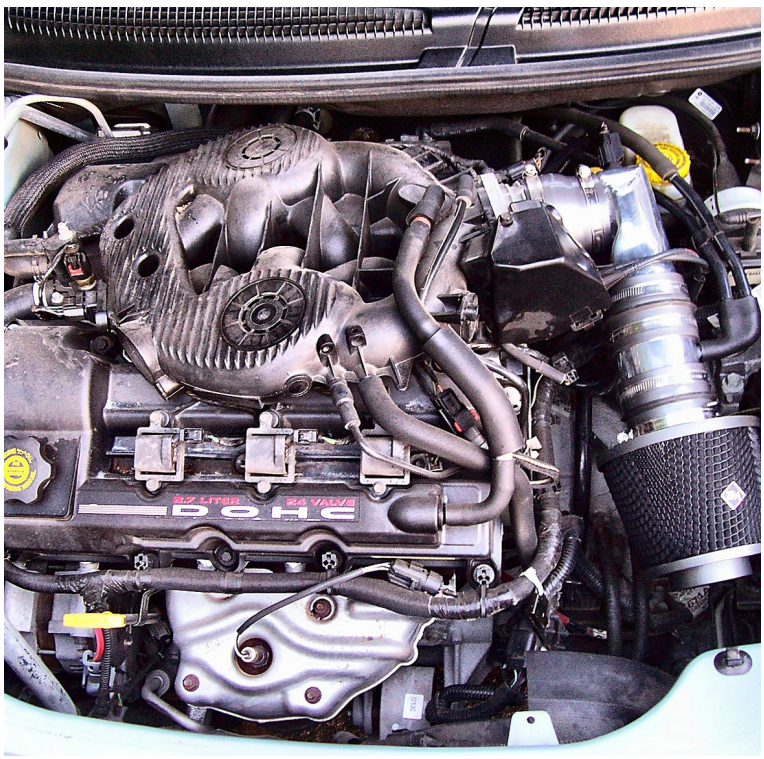





Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280