WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-158-101 / 1995-2001 Chevrolet Lumina 3.1L & 3.4L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1998-2003 Chevrolet Malibu 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1999-2003 Chevrolet Monte Carlo 3.4L	CARB EO# N/A
Secret Weapon: 307-158-101 / 2000-2003 Chevrolet Monte Carlo 3.8L	CARB EO# N/A
Secret Weapon: 307-158-101 / 2000-2005 Chevrolet Impala 3.4L & 3.8L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1994-1998 Oldsmobile Achieva 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1995-1996 Oldsmobile Ciera 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1988-2003 Pontiac Bonneville 3.8L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1994-1997 Pontiac Grand Am 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1999-2005 Pontiac Grand Am 3.4L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1997-2004 Pontiac Grand Prix 3.8L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1989-2003 Pontiac Grand Prix 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1994-2003 Buick Century 3.1L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1992-2003 Buick LeSabre 3.8L	CARB EO# N/A
Secret Weapon: 307-158-101 / 1992-2003 Buick Regal 3.8L	CARB EO# N/A
Dragon Intake: 807-158-101 / 1995-2001 Chevrolet Lumina 3.1L & 3.4L	CARB EO# N/A
Dragon Intake: 807-158-101 / 1998-2003 Chevrolet Malibu 3.1L	CARB EO# N/A
Dragon Intake: 807-158-101 / 1999-2003 Chevrolet Monte Carlo 3.4L	CARB EO# N/A
Dragon Intake: 807-158-101 / 2000-2003 Chevrolet Monte Carlo 3.8L	CARB EO# N/A
Dragon Intake: 807-158-101 / 2000-2005 Chevrolet Impala 3.4L & 3.8L	CARB EO# N/A
Dragon Intake: 807-158-101 / 1994-1998 Oldsmobile Achieva 3.1L	CARB EO# N/A

Dragon Intake: 807-158-101 / 1995-1996 Oldsmobile Ciera 3.1L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1988-2003 Pontiac Bonneville 3.8L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1994-1997 Pontiac Grand Am 3.1L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1999-2005 Pontiac Grand Am 3.4L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1997-2004 Pontiac Grand Prix 3.8L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1994-2003 Buick Century 3.1L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1992-2003 Buick LeSabre 3.8L — **CARB EO# N/A**

Dragon Intake: 807-158-101 / 1992-2003 Buick Regal 3.8L — **CARB EO# N/A**

Parts : **1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" / 1 x 10mm Hose / 3 x 3 -3" Coupler 1 x 3"-3.5" Coupler / 1 x Intake System Bracket kit / 7 x 3" Clamp / 1 x 4" Clamp / 1 x Grommet**

1. **Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.**
2. **Remove the PCV hose from the OEM intake and engine.**
3. **Unplug the MAF sensor and carefully remove it from the OEM air box.**
4. **Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.**
5. **Wipe the throttle body clean of any grease, install the 3"-3" coupler onto throttle body, secure with OEM clamp.**
6. **Insert Weapon*R intake pipe into the 3"-3" coupler, secure with a clamp.**
7. **Vehicles with no MAF install 3"-3" coupler onto end of intake pipe, secure with a clamp.**
8. **Vehicles MAF sensor install the 3"-3" coupler, secure with a clamp.**
9. **Install the MAF into the 3'"-3" coupler clamp down.**
10. **Vehicles with AIT sensors must drill 3/4" hole in side of tube for sensor grommet. Insert AIT into grommet.**
11. **Measure the OEM PCV hose and replace it with the supplied 10mm hose, from the PCV port to the intake pipe.**
12. **SOME VEHICLES MAY NEED TO USE THE 3"-3.5" COUPLER ON THEIR THROTTLE BODY OR MAF SENSOR MODELS WITH ECU IN OEM AIRBOX. REMOVE ECU FROM AIRBOX, IT IS OK TO LAY & SIT ECU DOWN.**
13. **Install the 3"-3" coupler onto WR filter, secure with supplied clamp.**
14. **Install filter assembly onto the end of MAF sensor, secure with OEM clamp.**
15. **Place the U-shaped end of the bracket under the clamp on the air filter.**
16. **Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.**
17. **Bend the straight end of the bracket to meet the rubber mounting grommet.**
18. **Secure with the washer and nut from the bracket kit.**
19. **Position the intake pipe so it does not touch any part of the vehicle.**
20. **Check hood clearance. Adjust the intake tube for the best fit and clearance.**
21. **Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).**

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: **WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION.**

Note: **Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!**

Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.

Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving. Do not rev the engine until it is fully warmed up, or the check engine light may come on.



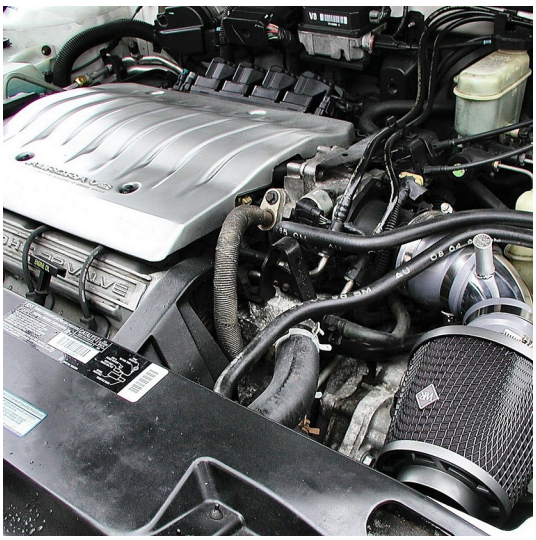





Bracket Video

Air Filter Cleaning Video

Question & Product, Please refer to our website @ WWW.WEAPON-R.COM, Tel#650-877-8280