US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-167-101 / 2005-2008 Dodge Magnum 3.5L — **CARB EO#: N/A**

Secret Weapon: 307-167-101 / 2005-2009 Chrysler 300 3.5L — **CARB EO#: N/A**

Secret Weapon: 307-167-101 / 2006-2010 Dodge Charger 3.5L — **CARB EO#: N/A**

Secret Weapon: 307-167-101 / 2009-2010 Dodge Challenger 3.5L — **CARB EO#: N/A**

Dragon Intake: 807-167-101 / 2005-2008 Dodge Magnum 3.5L — **CARB EO#: N/A**

Dragon Intake: 807-167-101 / 2005-2009 Chrysler 300 3.5L — **CARB EO#: N/A**

Dragon Intake: 807-167-101 / 2006-2009 Dodge Charger 3.5L — **CARB EO#: N/A**


Parts List : 1 x 4" Weapon*R Air Filter / 1 x Weapon*R Aluminum Air Intake Tube / 1 x 3.5"-4" Silicon Coupler 1 x 3"-3.5" Silicon Couplers / 1 x 15mm / 1 x 3" Clamp / 3 x 4" Clamp / 1 Heat Shield Kit / 1 x grommet


1. Loosen hose clamps securing OEM intake hose. Unplug and remove Air Temp Sensor, put aside for later steps.
2. Remove OEM intake hose.
3. Remove nut securing OEM air box, save for later steps. Disconnect rubber PCV hose from side of air box.
4. Pull air box upwards to remove.
5. Insert grommet into hole on Weapon*R intake pipe.
6. Unplug AIT Sensor from harness, and insert sensor into grommet on intake pipe.
7. Stretch 3" side of 3"-3.5" Weapon*R coupler over throttle body and secure with supplied clamp.
8. Insert Weapon*R intake pipe into 3.5" side of the coupler on the throttle body, AIT sensor closest to the throttle body. | Secure loosely with supplied clamps.
9. Reconnect wire harness to AIT sensor.
10. Connect OEM PCV hose to Weapon*R intake pipe.
11. Place Weapon*R heat shield into place.
12. Secure heat shield with OEM bolt from step 2.
13. Line the circular hole for the intake pipe with split silicone hose included in kit.
14. Insert Weapon*R filter into 4" end of 3.5"-4" coupler.
15. Secure with supplied clamp.
16. Attach filter and coupler assembly to intake pipe, opposite of the end with the grommet.
17. Secure with supplied clamp.
18. Check for hood clearance, readjust intake tube for perfect fitment and clearances.
19. Inspect engine compartment for loose tools and or loose clamps and bolts to be properly tightened.
20. Start engine and let idle for 10 minutes before Revving the engine, to allow the ECU to re-map new Air / Fuel Ratio curves to increased air intake to the engine.
21. Place Weapon*R CARB Sticker on a visible place in engine compartment. (if applicable) Perform a final inspection before driving vehicle.
22. Installation of your New Weapon*R Performance Intake System is completed, we hope you enjoy our performance products.


DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

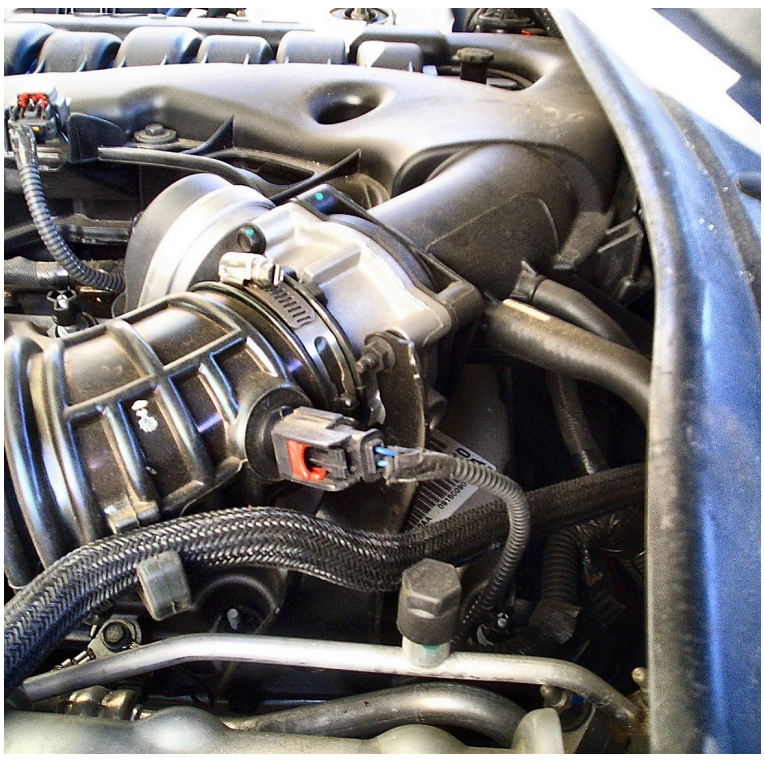

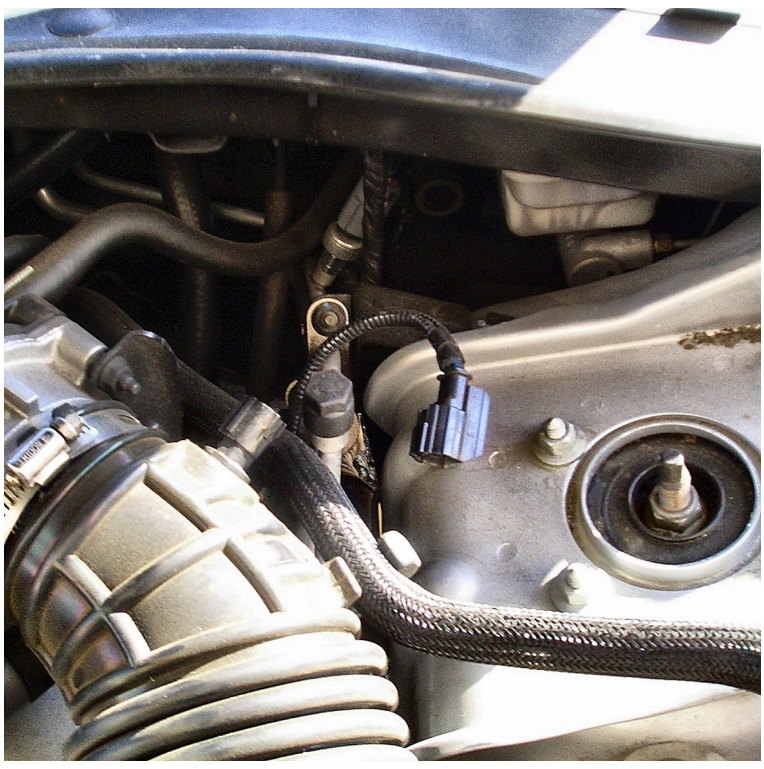

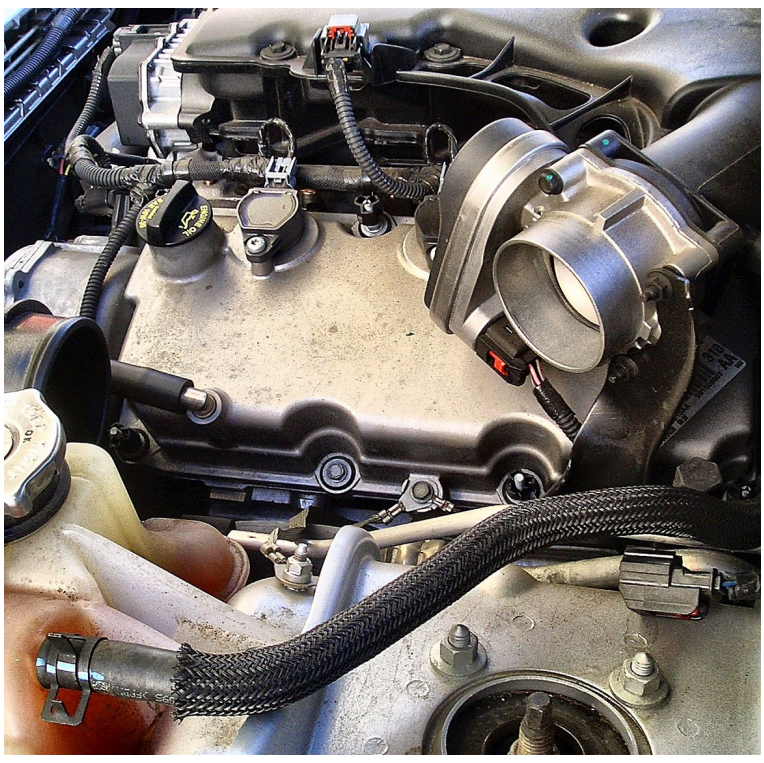



Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280