US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-172-101 / 2004-2006 Chrysler Pacifica V6 — CARB EO#: N/A


Parts List : 1 x Weapon*R 3.5" Intake pipe / 1 x Weapon*R 4" Air Filter / 1 x 3.5"-3.5", 1X 3.5"-4" Coupler
1 x 15mm Vacuum line / 1 x Intake System Bracket kit / 4 x 4" Clamp


1. Remove bolts securing OEM air cleaner box, loosen clamps on OEM intake box.
2. Remove OEM intake box top.
3. Remove bolts securing bottom OEM air cleaner box, and remove bottom portion.
4. Disconnect the MAF sensor harness, carefully remove MAF sensor from OEM intake pipe.
5. Install the 3.5"-3.5" coupler onto MAF sensor side facing where the OEM air box was attached to.
6. Reinstall MAF into OEM intake tube secure with OEM clamp. Reconnect MAF sensor harness.
7. Insert Weapon*R intake pipe into the 3.5"-3.5" coupler, secure with a clamp.
8. Install 3.5"-4" coupler onto 3.5" side of intake pipe secure with a clamp.
9. Install either OEM 15mm line or use WR provided line.
10. Install the 4" WR filter into 4" side of coupler, secure with supplied clamp.
11. Place the U-shaped end of the bracket under the clamp on the air filter.
12. Install the rubber mounting grommet in the hole closest to the Weapon*R air filter.
13. Bend the straight end of the bracket to meet the rubber mounting grommet.
14. Secure with the washer and nut from the bracket kit.
15. Position the intake pipe so it does not touch any part of the vehicle.
16. Check hood clearance. Adjust the intake tube for the best fit and clearance.
17. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

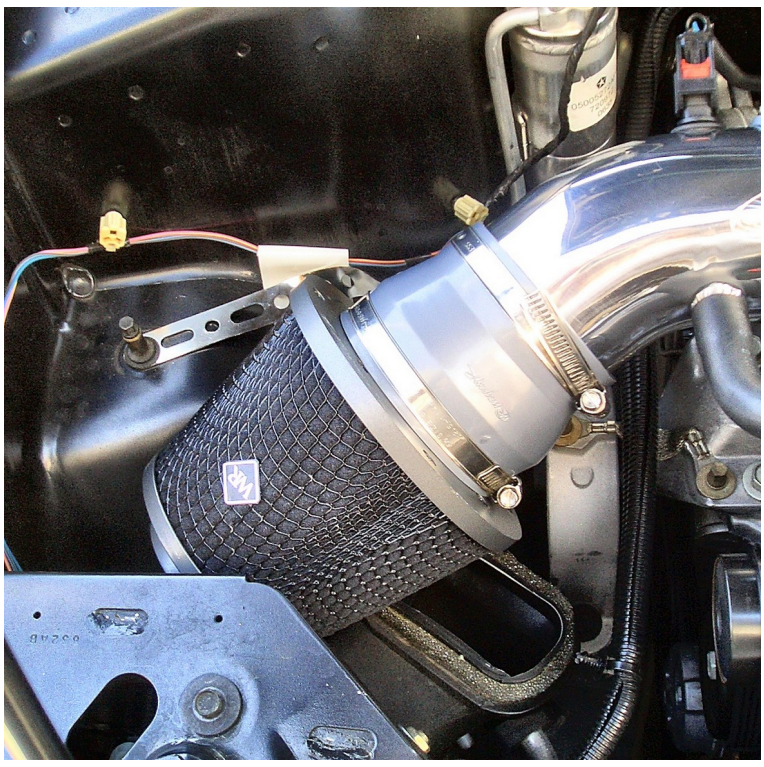

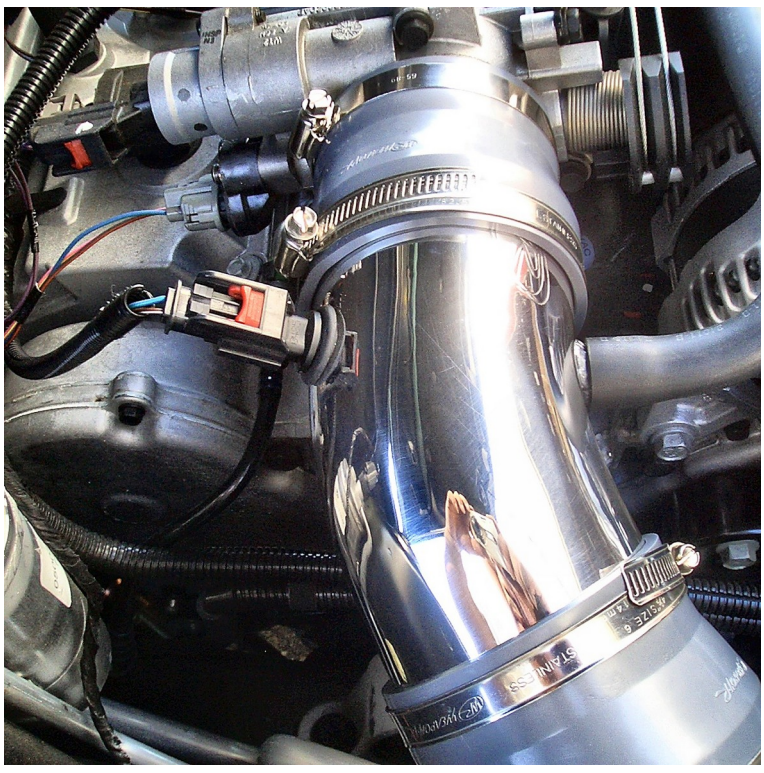



Intake System Bracket Video

Air Filter Cleaning Video