WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-204-101 / 2013-2014 DODGE DART 1.4L " Turbo application only "

CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R 3" Air Filter / 1 x 15mm Hose / 1 x 10mm hose
1 x 2"-2.5" Black Reinforced Coupler / 1 x 3"-3" Coupler / 1 x Intake System Bracket kit / 4 x 3" Clamp

1. Loosen clamps securing OEM air cleaner tube to Turbo inlet.
2. Disconnect 4mm Line from OEM inlet tube 3.
3. Disconnect 15 mm line from OEM inlet tube Unclip OEM PCV plug from OEM inlet tune, Unbolt 10mm Bolt from OEM air box located in the front.
4. Remove complete OEM air cleaner box from fender well.
5. Lift out Complete OEM Air cleaner box upwards Wipe the turbo Inlet clean of any oil, install the 2."-2.5" Black coupler onto Turbo, secure with a clamp.
6. Remove 2 x 10mm Bolts, Body Clips to Upper Fender cover, Remove cover to gain access to OEM Resonator bolt Jack up Passenger side of vehicle and Support with Stand.
7. Remove Passenger side Wheel and Proceed to remove 8mm bolts and body clips to Inner fender liner Pry back inner liner, Remove 2 x 10mm Bolts securing Resonator tube bracket to frame Up top remove 10mm bolt holding OEM resonator tube to inner liner and pull out complete OEM resonator assembly.
8. Insert Weapon*R intake pipe into the 2.5" end of the Black coupler, secure with a clamp. Install 3"-3" coupler onto filter.
9. Install WR filter into the inner fender liner and Secure filter to Weapon-R intake pipe & secure with clamps both ends.
10. Install U-shaped bracket on WR pipe to bolt location on inner frame as shown in picture below Reinstall OEM 4mm Hose into WR pipe Using short piece of WR 15mm hose connect OEM 15mm hard line to WR pipe Locate 10mm OEM hardline "T". Proceed to trim OEM hardline and remove Hardline from "T" section (pictured)
11. Install WR 10mm Hose from OEM "T" to Weapon-R pipe 10mm port.
12. Position the intake pipe so it does not touch any part of the vehicle.
13. Check hood clearance. Adjust the intake tube for the best fit and clearance.
14. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).

Note: ::: | Do NOT rev engine until engine is properly warmed up. Failure to do so may cause check engine light to come on.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

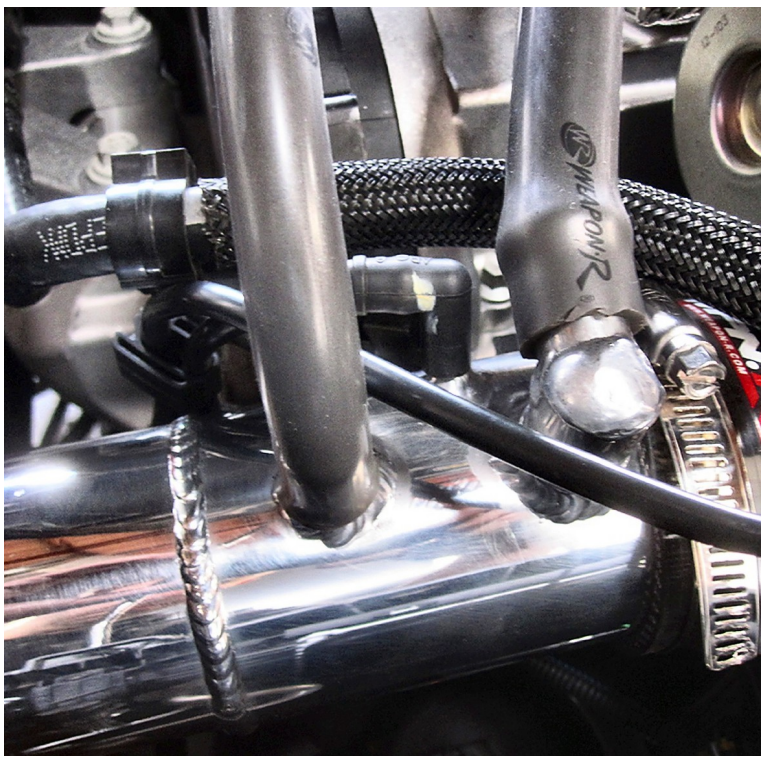

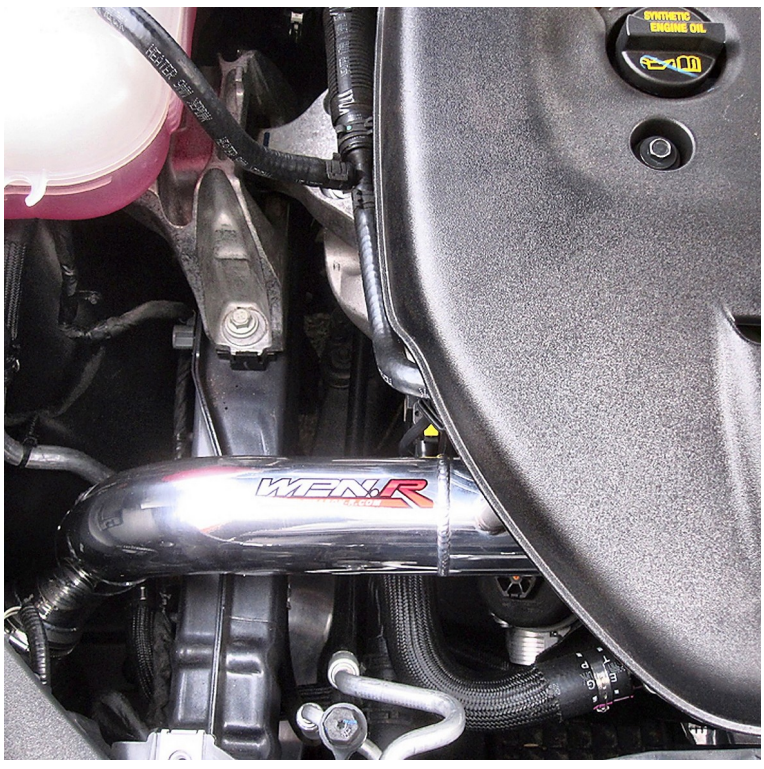

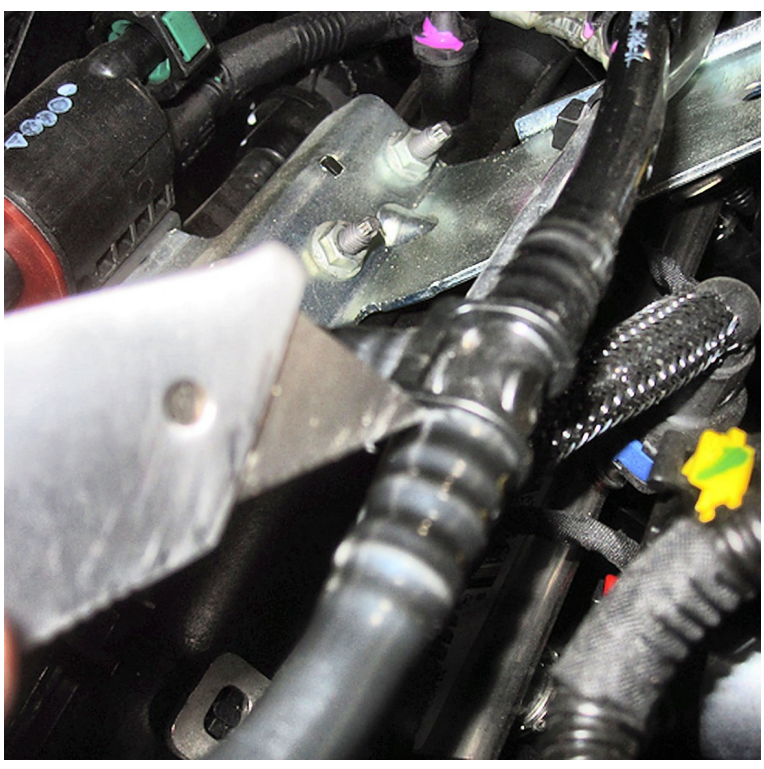

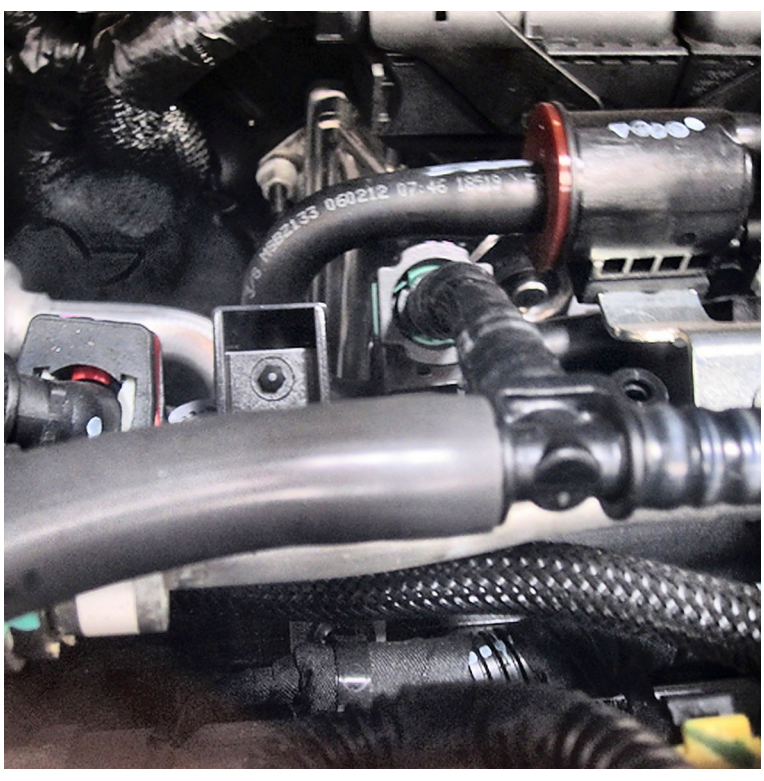

Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280