US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 307-206-101 / 2013-2014 FORD FOCUS ST 2.0L TURBO CARB EO#: N/A

Parts List : 1 x Weapon*R Intake pipe / 1 x Weapon*R Air Filter 3" TALL / 2 x 3 -3" Coupler
1 x Intake System Bracket kit / 4 x 3" Clamp

1. Remove the bolts holding the OEM air box. Loosen the clamps on the OEM rubber intake tube.
2. Loosen Clamps on OEM plastic pipe after OEM rubber intake pipe.
3. Disconnect the MAP sensor harness, carefully remove MAP sensor from OEM air box.
4. Remove the OEM rubber intake tube. Lift the OEM air box straight up and out.
5. Install the 3"-3" coupler onto OEM plastic elbow, Coupler will need to be stretched over and secured with clamp.
6. Install MAP sensor into Adpater located on WR pipe and bolt down.
7. Insert Weapon*R intake pipe into the 3"-3" coupler, secure with a clamp.
8. Install the 3"-3" coupler onto WR filter, secure with supplied clamp.
9. Install filter assembly onto the end of WR intake pipe, secure with a clamp.
10. Line up U-shaped part of intake pipe bracket to where OEM plastic pipe was secured and use OEM bolt to secure pipe.
11. Reconnect MAP sensor harness.
12. Position the intake pipe so it does not touch any part of the vehicle.
13. Check hood clearance. Adjust the intake tube for the best fit and clearance.
14. Place the Weapon*R CARB sticker in a visible spot in the engine bay (if applicable).
    Note: WARNING: EO# LABEL IS REQUIRED TO AID IN THE PASSING THE SMOG CHECK INSPECTION. IF APPLICABLE.

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE!
Report any defective or missing parts to the authorized Weapon*R dealer you bought this product from.
Installation requires some mechanical skill. We recommend having a qualified mechanic install it.

Note: After installing the intake, start the engine and let it idle to operating temperature before driving.
Do not rev the engine until it is fully warmed up, or the check engine light may come on.

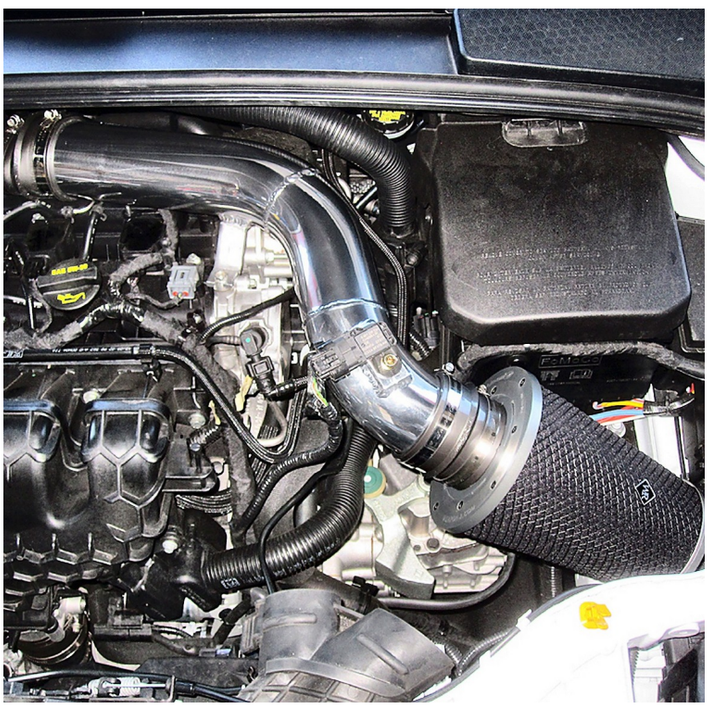



Intake System Bracket Video

Air Filter Cleaning Video

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280