WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon : 301-121-101 / 1997-1999 Acura CL 3.0L V6 / 1995-2002 Honda Accord V6 ARB# D-489-3

Dragon Intake : 801-121-101 / 97-99 Acura CL V6 / 95-02 Honda Accord V6 / 99-05 Odyssey V6 / 03-06 Honda Pilot V6 ARB# D-489

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter / 1 x 10mm Hose
2 x 3” Coupler / 1 x Intake System Bracket kit / 3 x 3" Clamp

1 Remove bolts securing OEM air cleaner box, loosen clamps on OEM rubber intake pipe.
2 Remove the coolant transfer / PCV hardline from from OEM intake and engine.
3 Mark the coolant tranfer hose origins, install the 10mm hose supplied in kit to those 2 locations.
4 Remove the OEM rubber intake tube, remove the OEM air cleaner box by pulling upwards.
5 Wipe the throttlebody clean of any grease or dirt, install the 3" coupler onto throttlebody, secure with OEM clamp.
6 Insert the intake pipe into 3" coupler on throttlebody, secure with supplied clamp.
7 Measure the OEM PVC hose, replace with supplied 10mm hose, install from PVC port to intake pipe.
8 Install the hoses from their point of origin and onto the Weapon *R intake pipe.
9 Install the Weapon*R Hyper filter onto the end of the intake pipe.
Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
11 Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
12 Install U-shaped part of intake system bracket under the clamp on air filter.
13 Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
14 Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
15 Secure with washer and nut included in bracket kit.
16 Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
17 Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
18 Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.

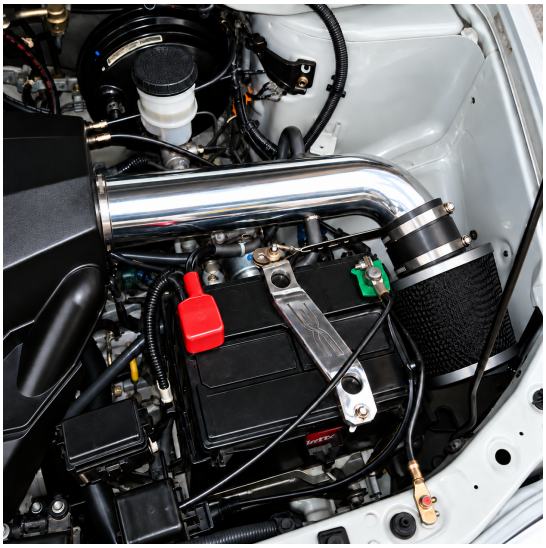

Question about this Product, Please refer to our website @ WWW.WEAPON-R.COM / Tel#650-877-8280