WEAPON R

US Patent# US 7,263,961B2

Recommended Air Filter Cleaning Intervals: 3000 Miles

Secret Weapon: 301-146-101 / 04-08 ACURA TL V6 3.2L (04-07 CARB Exempt)	ARB# D-489-3
Secret Weapon: 301-147-101 / 03-07 HONDA ACCORD 3.0L V6 (03-07 CARB Exempt)	ARB# D-489-3
Dragon Intake: 801-146-101 / 04-08 ACURA TL V6 3.2L (04-07 CARB Exempt)	N/A
Dragon Intake: 801-147-101 / 03-07 HONDA ACCORD 3.0L V6 (03-07 CARB Exempt)	N/A

Parts List : 1 x Weapon*R Intake pipe. / 1 x Weapon*R Air Filter 3" / 1 x 10mm hose
2 x 3" Coupler / 1 x Intake System Bracket kit / 3 x 3" Clamp

1. Remove the PVC emissions hardline from OEM intake tube,
2. Loosen the OEM airbox and rubber intake tube, remove OEM airbox and OEM rubber intake tube.
3. Place the 3" coupler onto the throttle body and secure with the OEM clamp.
4. Place Weapon*R Intake Tube into the 3" coupler and secure with clamp.
5. Install the 10mm hose onto the 10mm port on intake pipe and the PVC hardline on the engine .
6. Insert the Weapon*R filter into the intake pipe, secure with clamp.
7. Install 3" coupler onto Dragon or Secret Weapon air filter, secure with supplied clamp.
8. Install filter assembly onto the end of Weapon*R intake pipe, secure with OEM clamp.
9. Install U-shaped part of intake system bracket under the clamp on air filter.
10. Install the rubber mounting grommet to the closest hole to the Weapon*R air filter.
11. Bend the straight portion of the intake system bracket to the Rubber mounting grommet.
12. Secure with washer and nut included in bracket kit.
13. Position air intake pipe for clearance, making sure no parts are touching any part of the vehicle.
14. Check for hood clearance, re-adjust intake tube for perfect fitment and clearances.
15. Place Weapon*R CARB Sticker on a visible place in engine compartment. (If Applicable)

DISCLAIMER: NOT LEGAL FOR SALE OR USE ON CALIFORNIA RESTRICTED AIR POLLUTION MOTOR VEHICLES.

Note: Returned Products may be subject to a restocking charge. INSTALLED PRODUCTS ARE NON-REFUNDABLE !
Report any defective or missing parts to the authorized Weapon*R dealer you purchased this product from.
Installation does require some mechanical skills. We recommend a qualified mechanic to install this product.

Note: After installation of intake. Start engine and let the car idle until the proper operating temperature before driving.
Do not rev engine until the engine has properly warmed up. Failure to do so may cause a check engine light to come on.

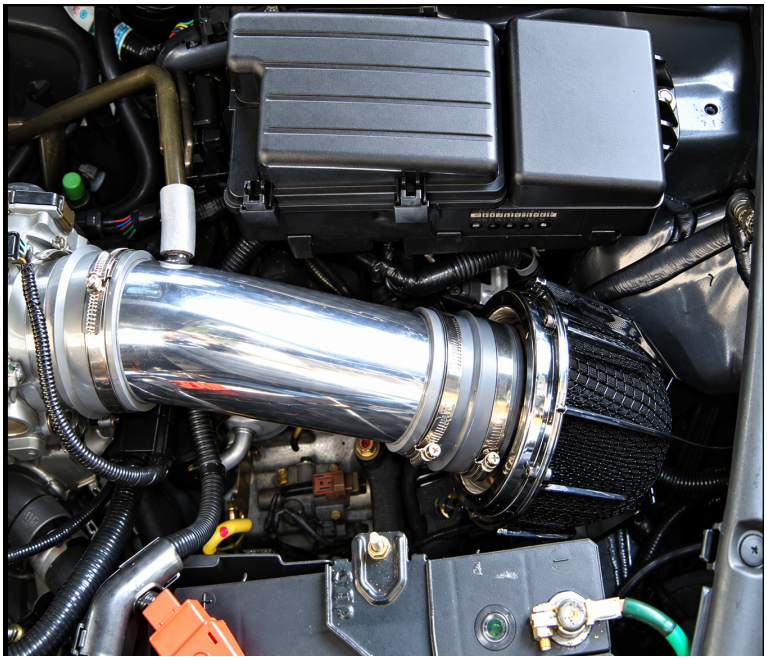

Question about this Product, Tech assistance @ Tel#650-877-8280 / WEAPON-R.COM